LifeFitness

# *ARCTIC SILVER 97T TREADMILL*

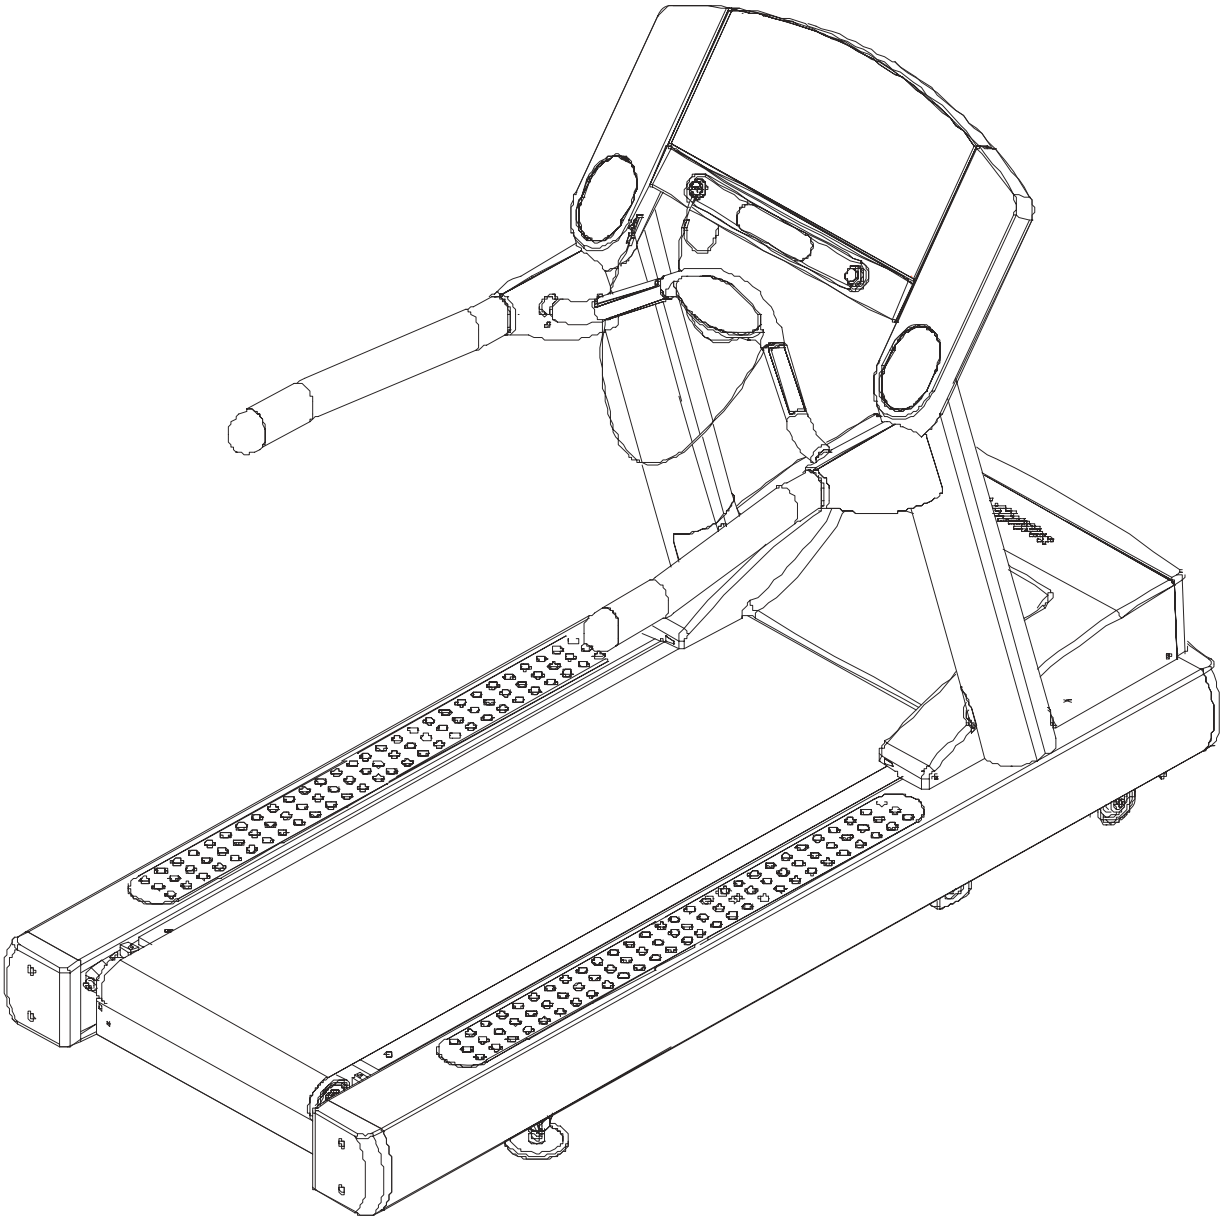

## Customer Support Services

## *PARTS MANUAL* rev 23 May 2008

CONSOLE, OVERLAY ASSEMBLY & OVERLAY ..... 5

CONSOLE COMPONENTS ..... 6

UPRIGHTS & HANDRAILS ..... 7

ERGO BAR & HEART RATE SENSORS ..... 8

REAR ENDCAPS & CUP HOLDERS ..... 9

MOTOR COVER, FRONT COVER & ENDCAPS ..... 10

SCUFF PAD & TINSEL ..... 11

ON-OFF SWITCH, ACCESS PLATE & GROMMETS ..... 12

BELT, DECK & REAR ROLLER ..... 13

LIFT FRAME & IEC RECEPTACLE ..... 14

LIFT MOTOR ASSY ..... 15

IDLER ARM ASSEMBLY ..... 16

LEG LEVELER ASSEMBLY ..... 17

FRONT ROLLER ASSEMBLY ..... 18

DRIVE MOTOR ASSEMBLY ..... 19

DSP-CONTROLLER ASSEMBLY ..... 20

LINE-CORDS & LINE-CORD OPTIONS ..... 21

CABLES FOR UNITS BETWEEN 0100 - 0104 ..... 22

CABLES FOR UNITS BETWEEN 0105 - 0300 ..... 23

CABLES FOR UNITS BETWEEN 0301 - 0601 ..... 24

CABLES FOR UNITS BETWEEN 0705 - 1601 ..... 25

| LANGUAGE | OPERATION MANUAL | INSTRUCTION ASSEMBLY | INSTRUCTION BAG ASSY. | SERVICE MANUAL |
|---|---|---|---|---|
| ENGLISH | M051-00K58-A177 | M051-00K58-A181 | AK58-00432-0000 | M051-00K58-A253 |
| FRENCH | M051-00K58-A178 | M051-00K58-A182 | AK58-00432-0001 | |
| PORTUGUESE | | | | |
| SPANISH | | | | |
| DUTCH | M051-00K58-A179 | M051-00K58-A183 | AK58-00432-0002 | |
| GERMAN | | | | |
| ITALIAN | | | | |
| JAPANESE | M051-00K58-A180 | M051-00K58-A184 | AK58-00432-0003 | |
| EUR | M051-00K58-A177 | M051-00K58-A181 | AK58-00432-0004 | |

*All Operation, Instruction Assembly & Instruction Bag Assembly may not be available

| AK58-00226-0000 | Hardware Bag Assembly: MFG;95T/97T | |
|---|---|---|
| **Item** | **Description** | **Qty** |
| 0K58-01305-0002 | PLUG: UPRIGHT S/C-C | 2 |
| 0K58-01347-0000 | GASKET: ERGOBAR C | 2 |
| 0017-00009-1049 | WRENCH: TORX; T27 B | 1 |
| 0017-00042-0326 | GROMMET: PLASTI; .130/.005 S/C#13-B | 2 |
| 0017-00042-0840 | CLIP: WIRE; PUSH-MTG; 3/4"; S/C#80-B | 5 |
| 0017-00101-1770 | 8-15X 8 PHL PAN A SS NO B | 6 |
| 0017-00101-1772 | 10-16X 8 PHL PAN B ST ZS B | 6 |
| 0017-00101-1773 | 1/4 -20X 8 TRX BUT CS SS NO B | 6 |
| 0017-00101-1774 | 5/16-18X40 TRX FLT CS ST ZS B | 4 |
| 0017-00101-1778 | 1/2 -13X16 UNS HEX CS G5 ZB B | 4 |
| 0017-00101-1780 | 8- X20 PHL TRS AB SS NO B | 8 |
| 0017-00104-0325 | WSH 516-.873-125 SL-D ST ZN B | 4 |
| 0017-00103-0327 | NUT 5/16-18 HEX; JAM D ST ZS B | 4 |

| GK58-00002-0096 | KIT: SERV; ROLLER-GUARDS; 97Ti BM | |
|---|---|---|
| **Part Number** | **Description** | **Qty** |
| AK58-00361-0001 | GUARD-ASSY: MFG; RT; 5.00 B | 1 |
| AK58-00361-0002 | GUARD-ASSY: MFG; LT; 5.00 B | 1 |
| M051-00K58-B128 | INSTR: SERV; ROLLER-GUARDS + | 1 |
| 0017-00042-0326 | GROMMET: PLASTI; .130/.005 S/C#13-B | 2 |
| 0017-00042-1147 | GROMMET: NYLON; SCREW B | 2 |
| 0017-00101-1776 | 10-16X 8 PHL PAN B ST ZB B | 4 |

*Parts that are included in this kit is as follows

| GK58-00002-0071 | KIT: SERV; ANTI-SLIP RAIL BM | |
|---|---|---|
| **Part Number** | **Description** | **Qty** |
| Only available in the kit | INSTR:TEMPLT; ANTI-SLIP RAIL B | 4 |
| Only available in the kit | INSTR: KIT; ANTI-SLIP RAIL + | 1 |
| 0K58-01376-0000 | RAIL: ANTI-SLIP;STEALTH-GREY E | 2 |
| Only available in the kit | PAD: WIPE; ALCOHOL/DRY B | |

| TOUCH UP PAINT: | |
|---|---|
| 0017-00008-0204 | PAINT: CAN; SPRAY; ARCTIC SILVER |
| 0017-00008-0205 | PAINT: BOTTLE; ARCTIC SILVER ( .5 OZ ) |
| 0017-00008-0206 | PAINT: PEN; ARCTIC SILVER ( .33 OZ ) |

| INK TRANSFER TOUCH-UP PAINT: SB No. GN05032101N | |
|---|---|
| 0017-00008-0210 | PAINT: TOUCH-UP; SHADOW-GRAY; .6 OZ BTL. |
| 0017-00008-0211 | PAINT: TOUCH-UP; SHADOW-GRAY; .6 OZ. PEN |

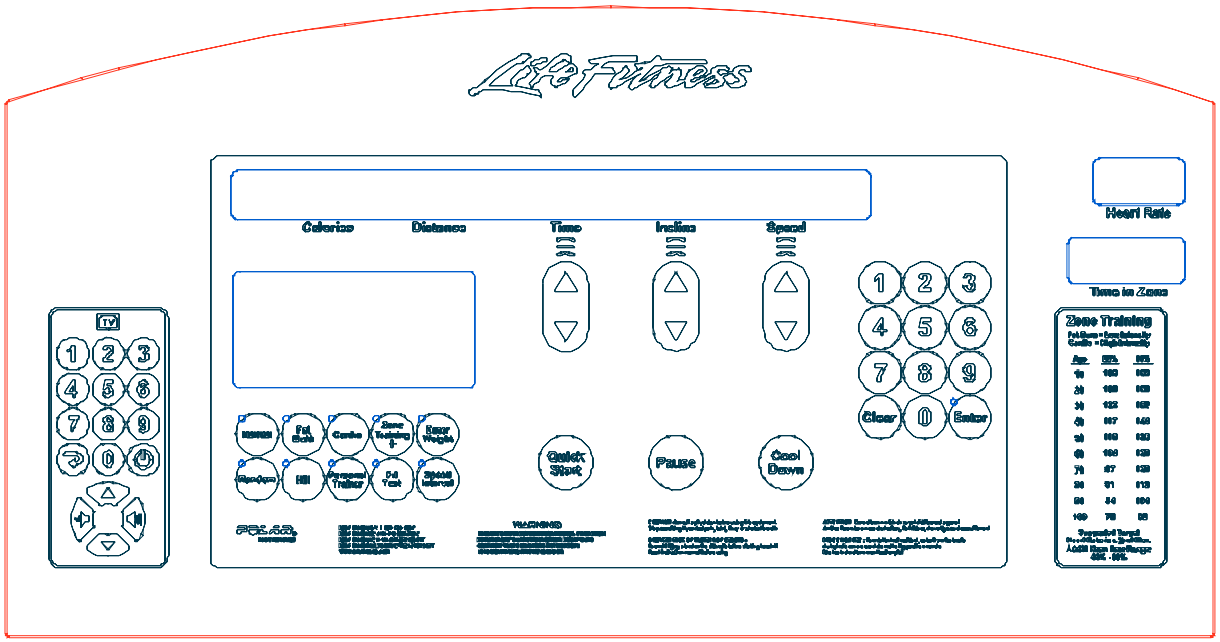


| LANGUAGE | CONSOLE | OVERLAY/BEZEL ASSY | OVERLAY |
|---|---|---|---|
| ENG/ENG | AK58-00390-0001 | AK58-00202-0001 | 0K58-01296-0001 |
| ENG+MET | AK58-00390-0002 | AK58-00202-0002 | 0K58-01296-0001 |
| GERMAN | AK58-00390-0003 | AK58-00202-0003 | 0K58-01296-0003 |
| SPANISH | AK58-00390-0004 | AK58-00202-0004 | 0K58-01296-0004 |
| JAPANESE | AK58-00390-0006 | AK58-00202-0006 | 0K58-01296-0006 |
| FRENCH | AK58-00390-0007 | AK58-00202-0007 | 0K58-01296-0007 |
| ITALIAN | AK58-00390-0008 | AK58-00202-0008 | 0K58-01296-0008 |
| DUTCH | AK58-00390-0009 | AK58-00202-0009 | 0K58-01296-0009 |
| PORTUGUESE | AK58-00390-0010 | AK58-00202-0010 | 0K58-01296-0010 |

*All Console, Overlay/Bezel Assembly or Overlay may not be available

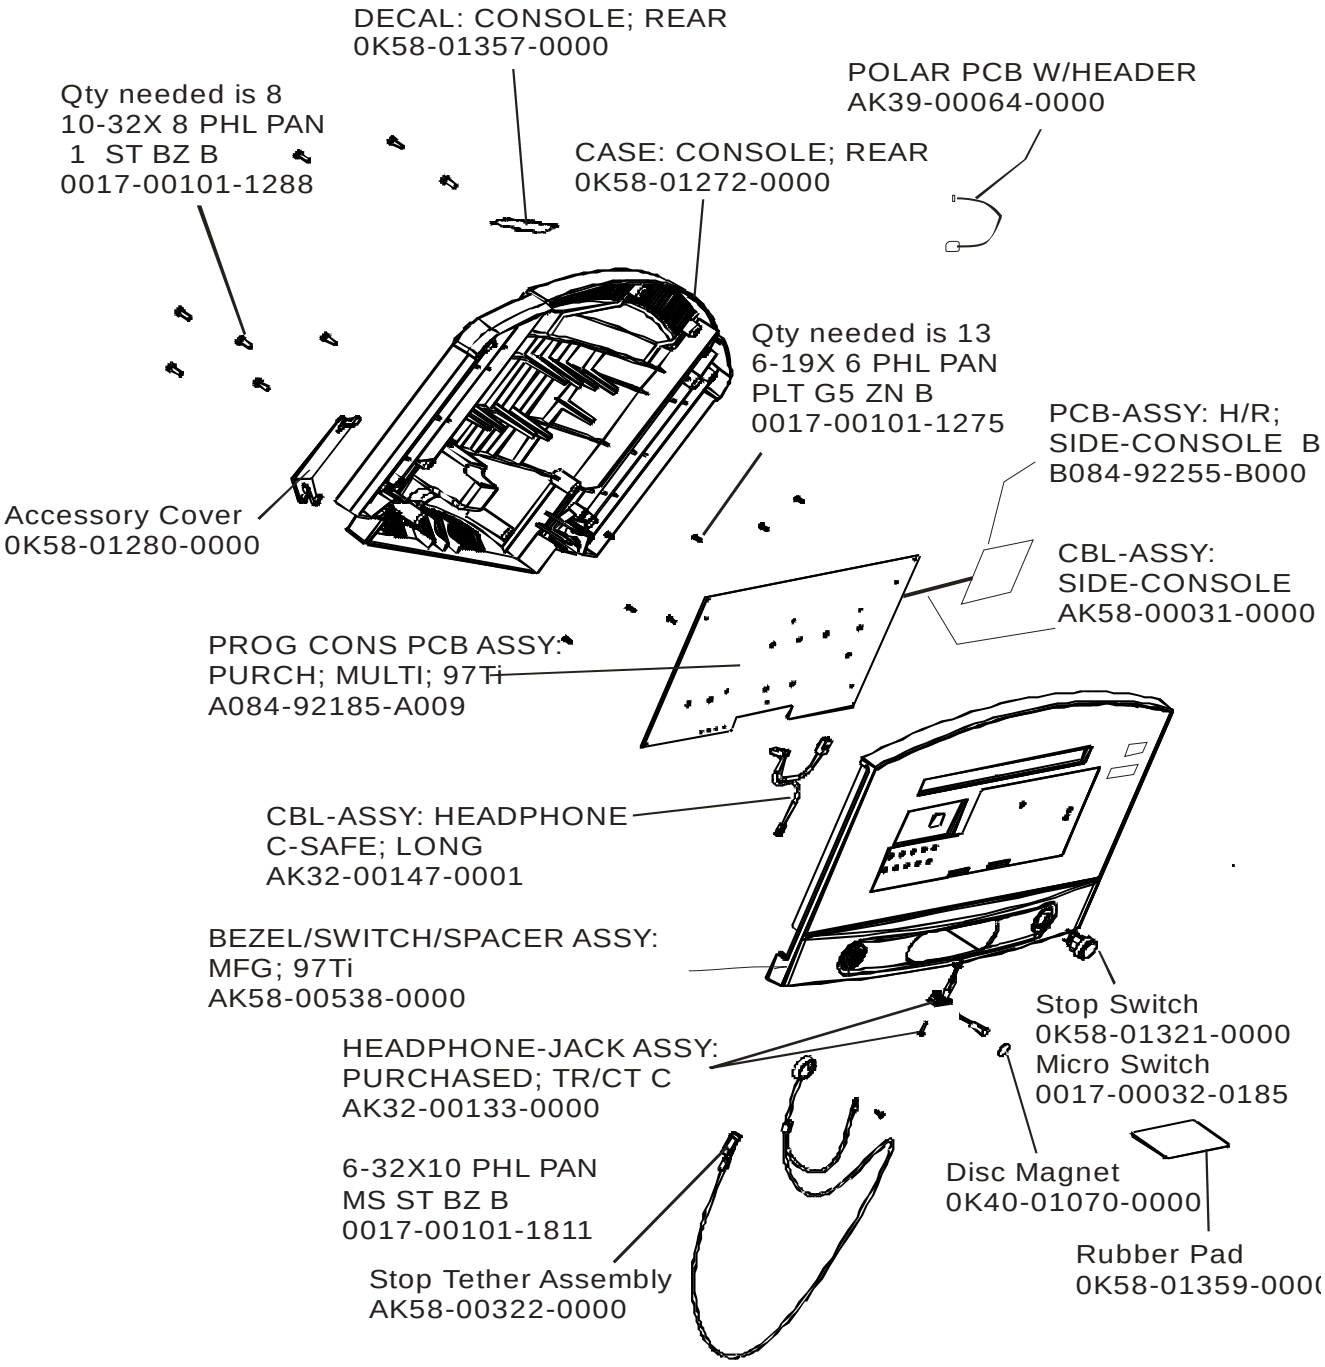
DECAL: CONSOLE; REAR
0K58-01357-0000
POLAR PCB W/HEADER
AK39-00064-0000
Qty needed is 8
10-32X 8 PHL PAN
1 ST BZ B
0017-00101-1288
CASE: CONSOLE; REAR
0K58-01272-0000
Qty needed is 13
6-19X 6 PHL PAN
PLT G5 ZN B
0017-00101-1275
PCB-ASSY: H/R;
SIDE-CONSOLE B
B084-92255-B000
Accessory Cover
0K58-01280-0000
CBL-ASSY:
SIDE-CONSOLE
AK58-00031-0000
PROG CONS PCB ASSY:
PURCH; MULTI; 97Ti
A084-92185-A009
CBL-ASSY: HEADPHONE
C-SAFE; LONG
AK32-00147-0001
BEZEL/SWITCH/SPACER ASSY:
MFG; 97Ti
AK58-00538-0000
Stop Switch
0K58-01321-0000
Micro Switch
0017-00032-0185
HEADPHONE-JACK ASSY:
PURCHASED; TR/CT C
AK32-00133-0000
6-32X10 PHL PAN
MS ST BZ B
0017-00101-1811
Disc Magnet
0K40-01070-0000
Rubber Pad
0K58-01359-000(
Stop Tether Assembly
AK58-00322-0000

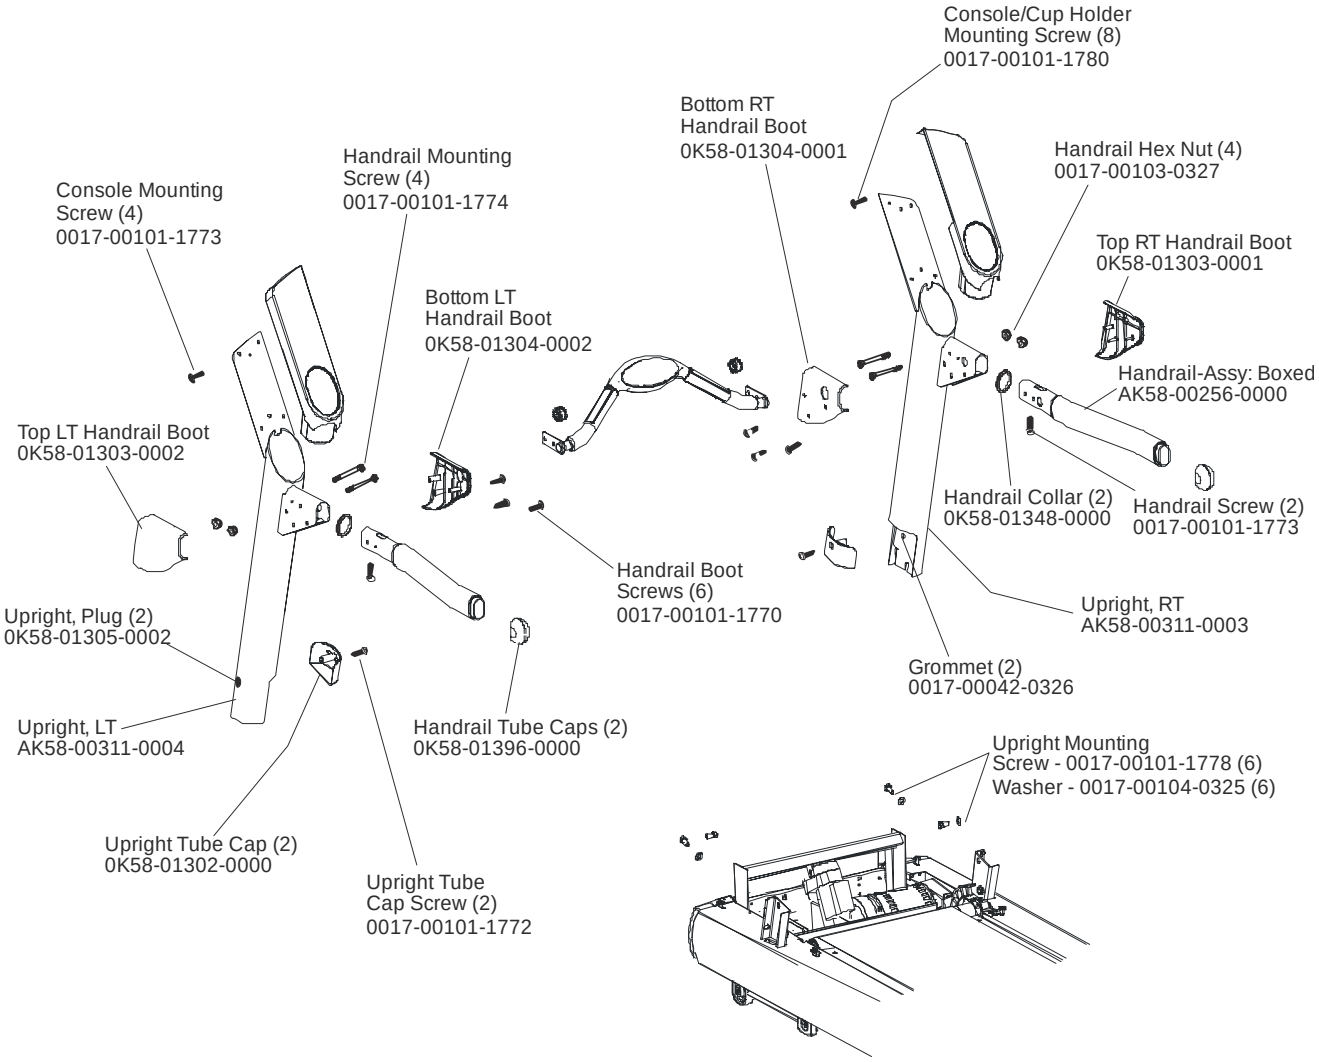
Console/Cup Holder
Mounting Screw (8)
0017-00101-1780
Bottom RT
Handrail Boot
0K58-01304-0001
Handrail Hex Nut (4)
0017-00103-0327
Handrail Mounting
Screw (4)
0017-00101-1774
Console Mounting
Screw (4)
0017-00101-1773
Top RT Handrail Boot
0K58-01303-0001
Bottom LT
Handrail Boot
0K58-01304-0002
Handrail-Assy: Boxed
AK58-00256-0000
Top LT Handrail Boot
0K58-01303-0002
Handrail Collar (2)
0K58-01348-0000
Handrail Screw (2)
0017-00101-1773
Handrail Boot
Screws (6)
0017-00101-1770
Upright, RT
AK58-00311-0003
Upright, Plug (2)
0K58-01305-0002
Grommet (2)
0017-00042-0326
Upright, LT
AK58-00311-0004
Handrail Tube Caps (2)
0K58-01396-0000
Upright Mounting
Screw - 0017-00101-1778 (6)
Washer - 0017-00104-0325 (6)
Upright Tube Cap (2)
0K58-01302-0000
Upright Tube
Cap Screw (2)
0017-00101-1772

**Ergo Bar & Heart Rate Sensors - AK58-00219-0000** **S/N TDT100000 and up**

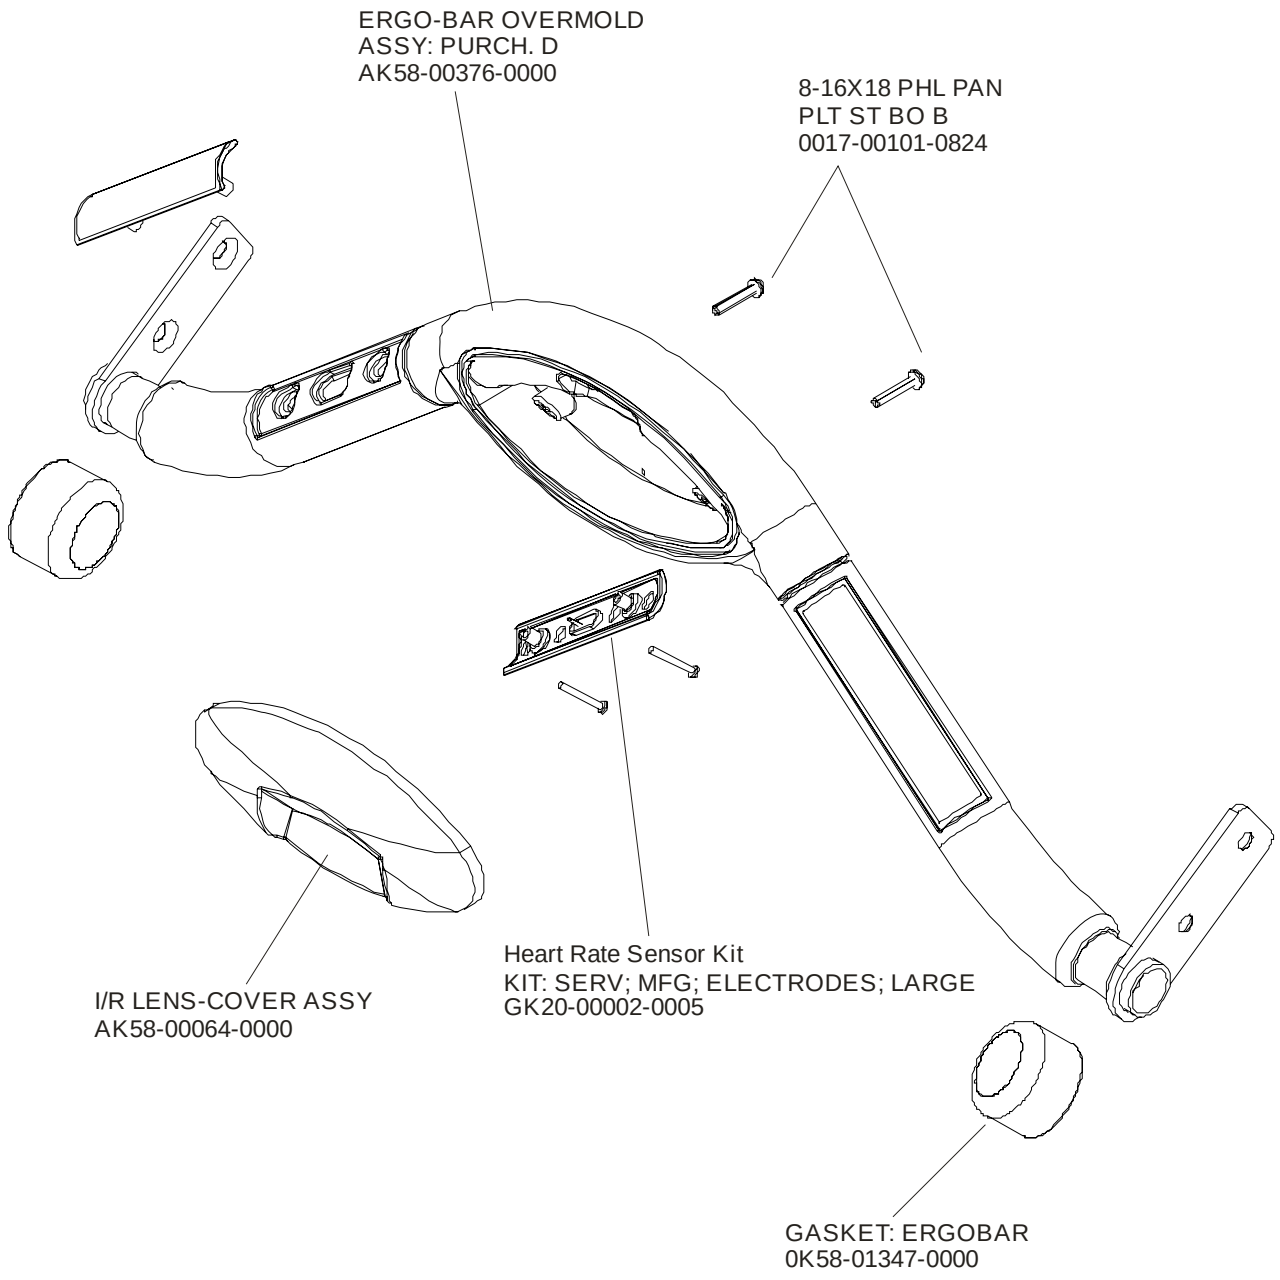

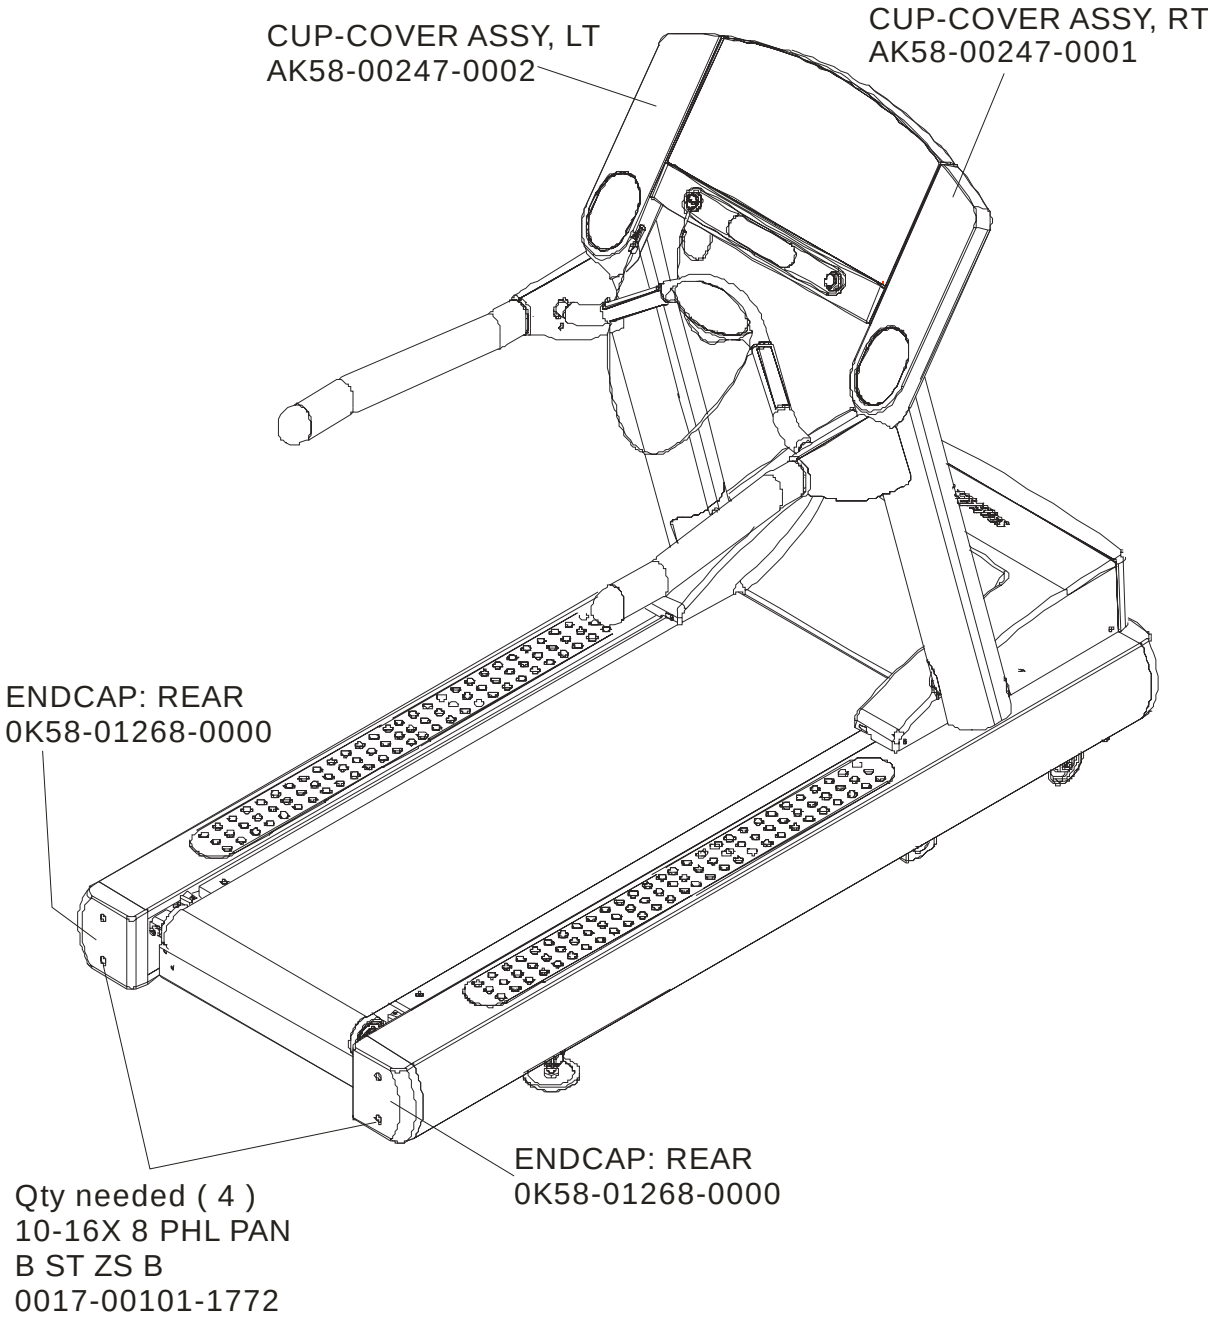
CUP-COVER ASSY, LT
AK58-00247-0002
CUP-COVER ASSY, RT
AK58-00247-0001
ENDCAP: REAR
0K58-01268-0000
Qty needed ( 4 )
10-16X 8 PHL PAN
B ST ZS B
0017-00101-1772
ENDCAP: REAR
0K58-01268-0000

## Motor Cover, Front Cover & Front End Caps

**S/N TDT100000 and up**

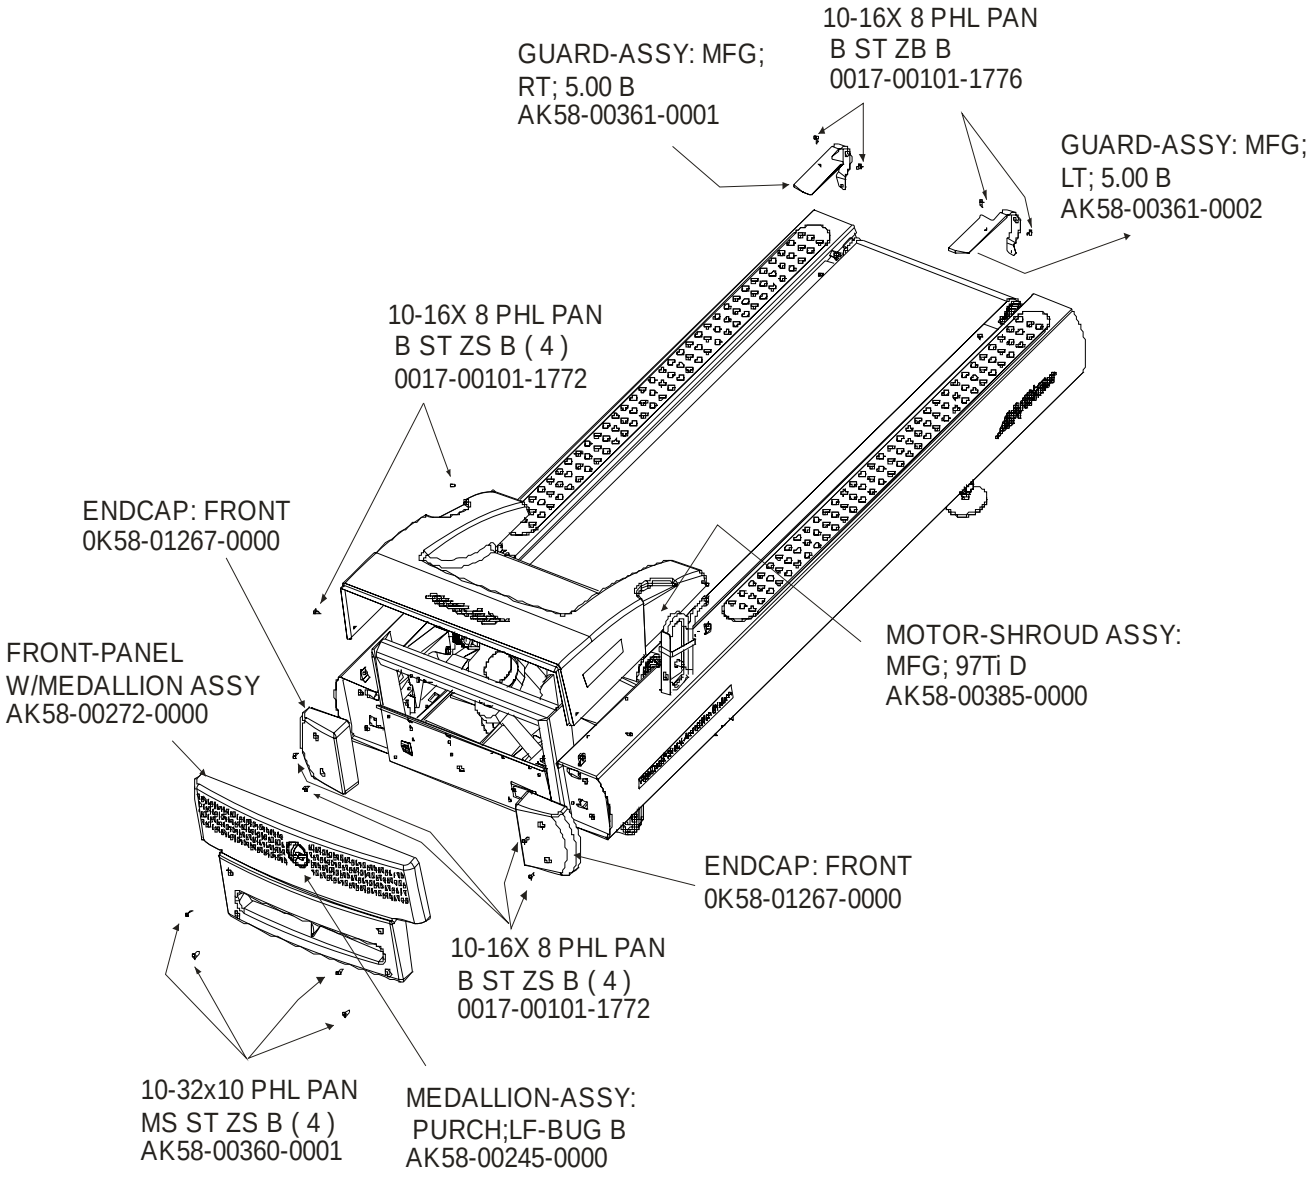

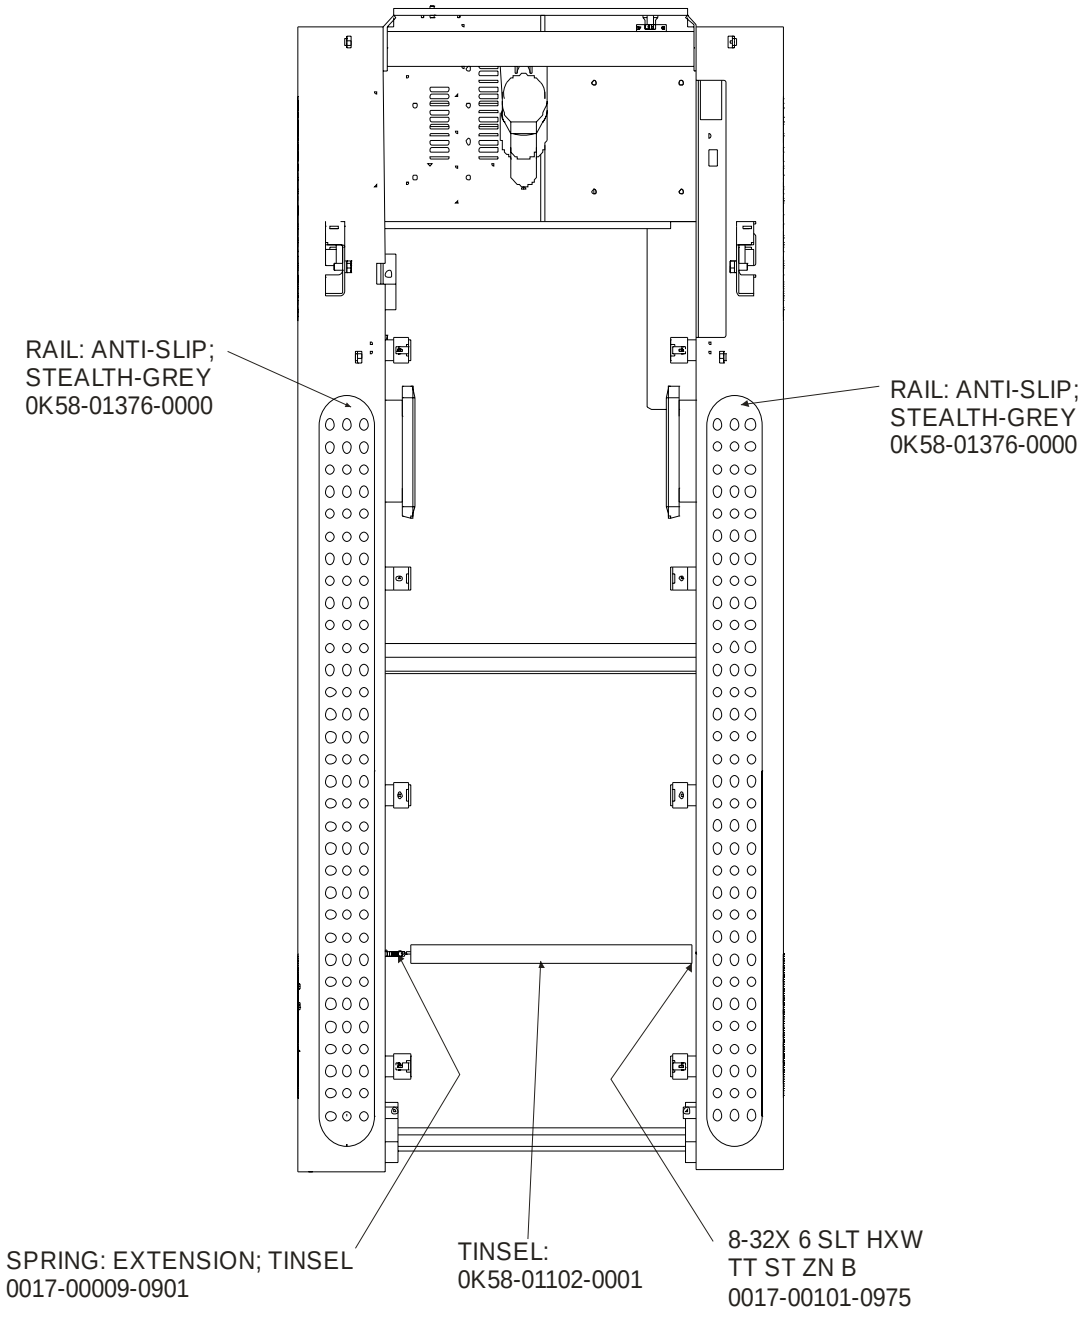
RAIL: ANTI-SLIP;
STEALTH-GREY
0K58-01376-0000
RAIL: ANTI-SLIP;
STEALTH-GREY
0K58-01376-0000
SPRING: EXTENSION; TINSEL
0017-00009-0901
TINSEL:
0K58-01102-0001
8-32X 6 SLT HXW
TT ST ZN B
0017-00101-0975

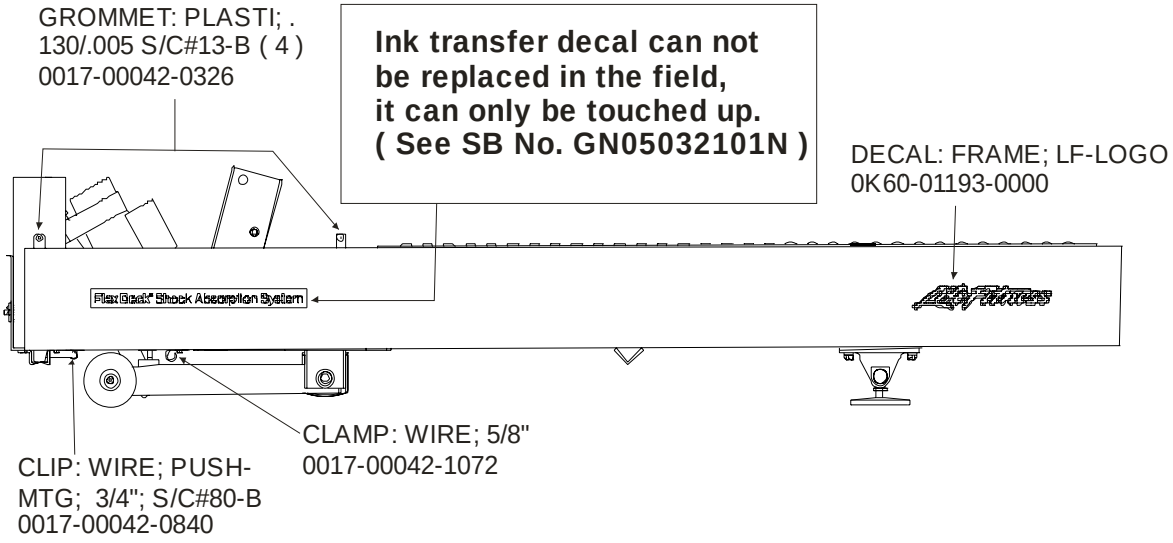
GROMMET: PLASTI; .
130/.005 S/C#13-B ( 4 )
0017-00042-0326
Ink transfer decal can not
be replaced in the field,
it can only be touched up.
( See SB No. GN05032101N )
DECAL: FRAME; LF-LOGO
0K60-01193-0000
FlexBeak® Shock Absorption System
CLAMP: WIRE; 5/8"
0017-00042-1072
CLIP: WIRE; PUSH-
MTG; 3/4"; S/C#80-B
0017-00042-0840

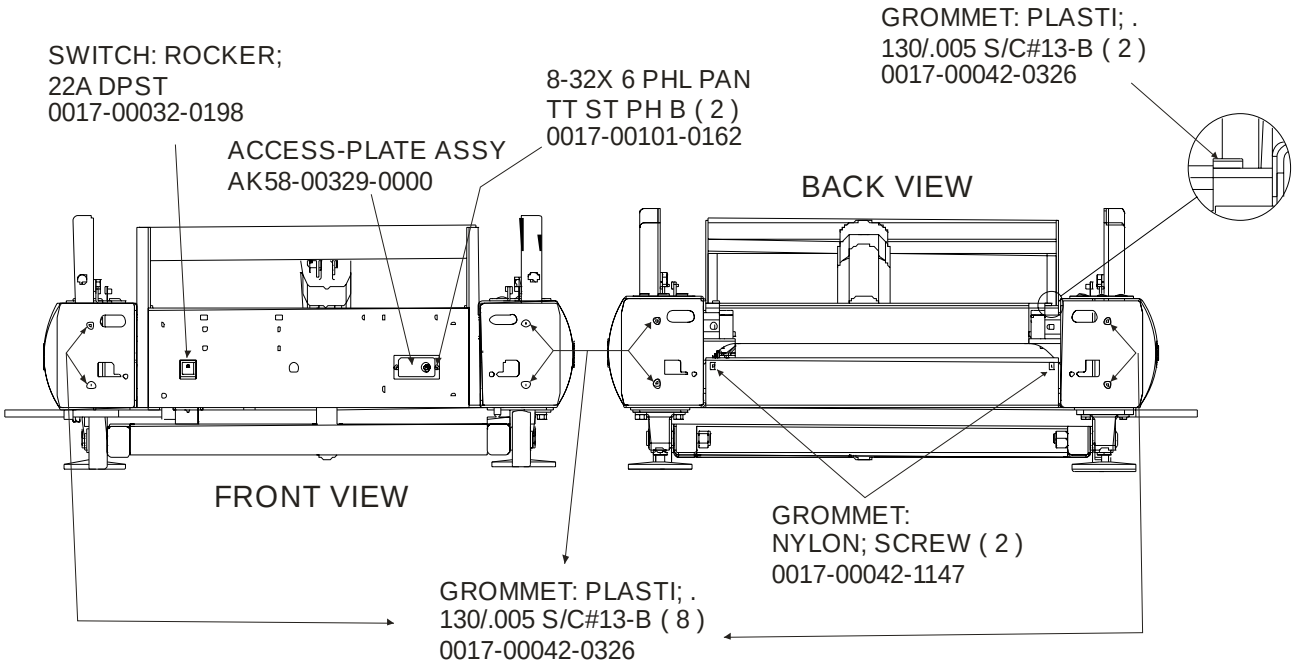
SWITCH: ROCKER;
22A DPST
0017-00032-0198
ACCESS-PLATE ASSY
AK58-00329-0000
8-32X 6 PHL PAN
TT ST PH B ( 2 )
0017-00101-0162
GROMMET: PLASTI; .
130/.005 S/C#13-B ( 2 )
0017-00042-0326
BACK VIEW
FRONT VIEW
GROMMET:
NYLON; SCREW ( 2 )
0017-00042-1147
GROMMET: PLASTI; .
130/.005 S/C#13-B ( 8 )
0017-00042-0326

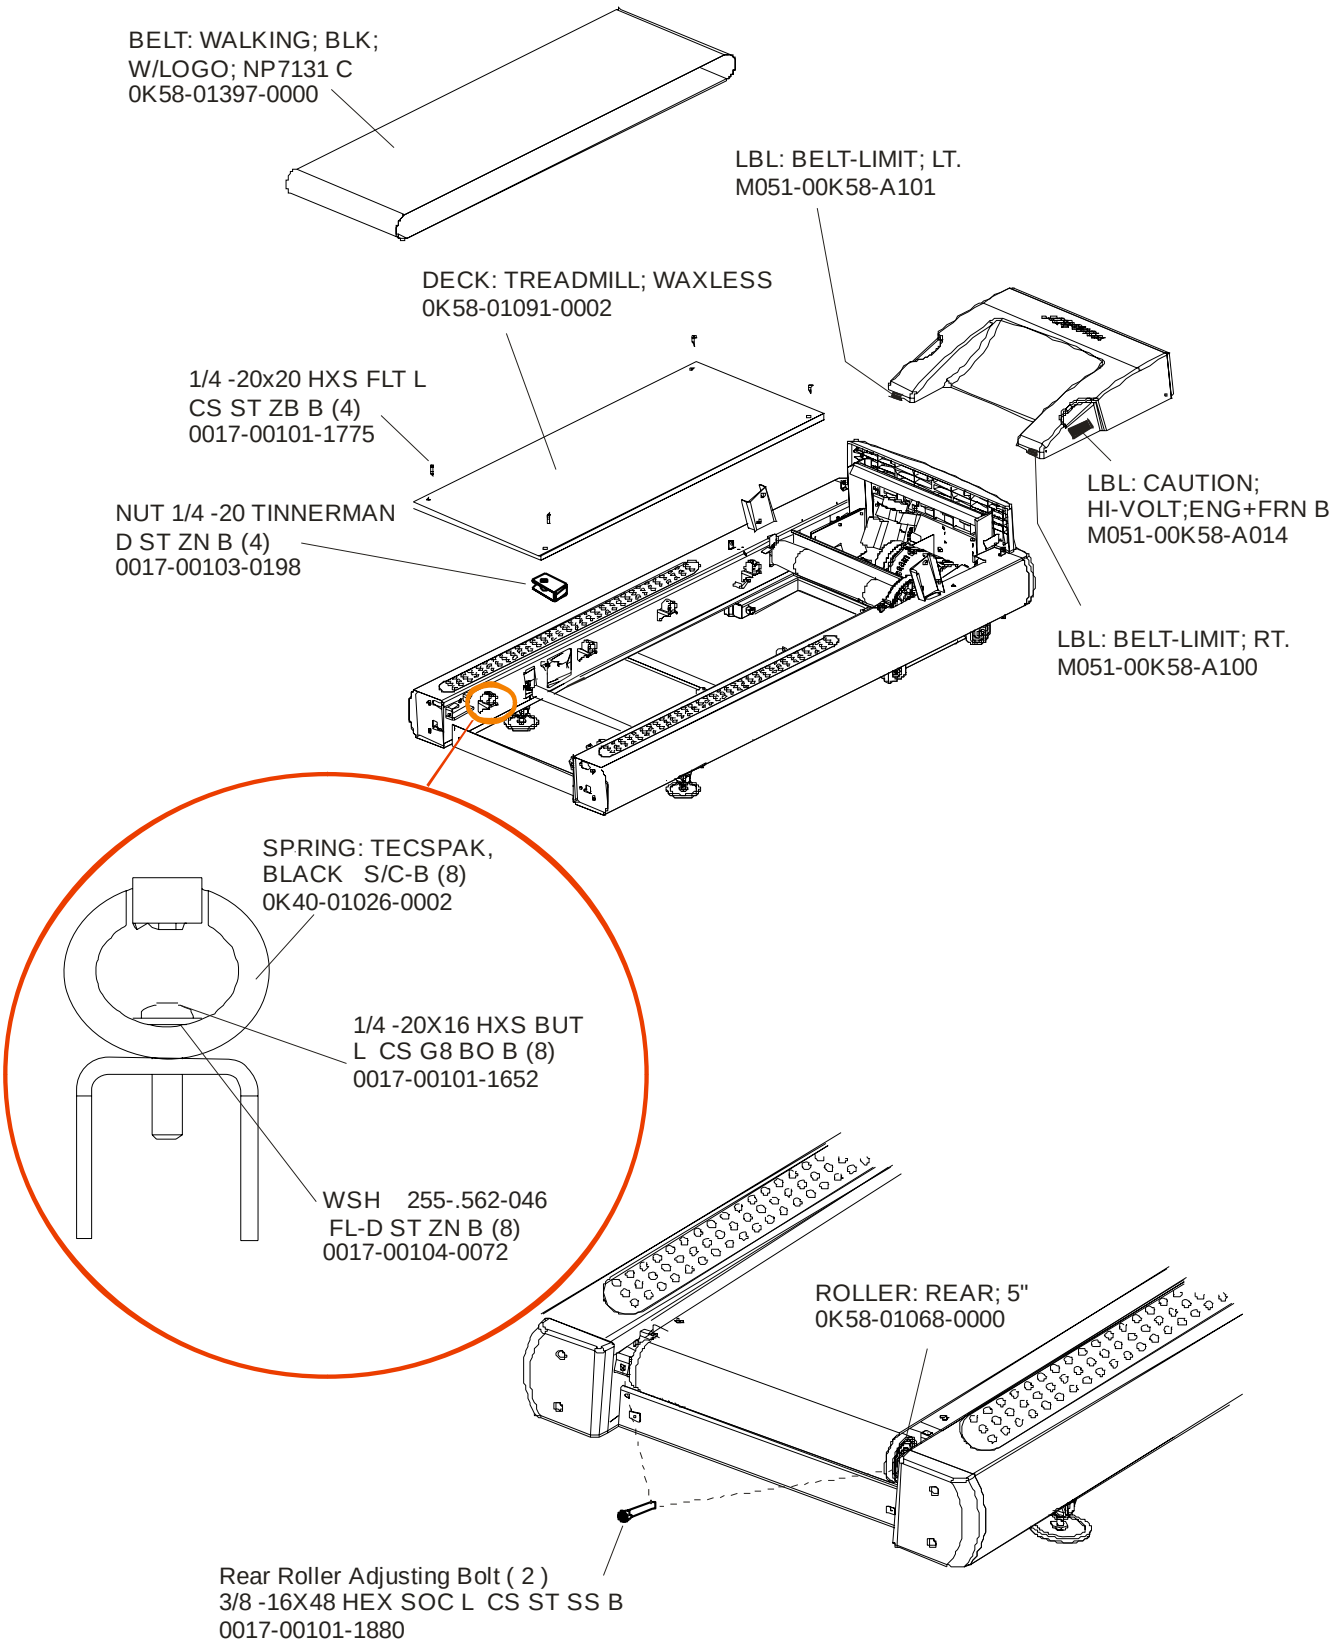
BELT: WALKING; BLK;
W/LOGO; NP7131 C
0K58-01397-0000
LBL: BELT-LIMIT; LT.
M051-00K58-A101
DECK: TREADMILL; WAXLESS
0K58-01091-0002
1/4 -20x20 HXS FLT L
CS ST ZB B (4)
0017-00101-1775
NUT 1/4 -20 TINNERMAN
D ST ZN B (4)
0017-00103-0198
LBL: CAUTION;
HI-VOLT;ENG+FRN B
M051-00K58-A014
LBL: BELT-LIMIT; RT.
M051-00K58-A100
SPRING: TECSPAK,
BLACK S/C-B (8)
0K40-01026-0002
1/4 -20X16 HXS BUT
L CS G8 BO B (8)
0017-00101-1652
WSH 255-.562-046
FL-D ST ZN B (8)
0017-00104-0072
ROLLER: REAR; 5"
0K58-01068-0000
Rear Roller Adjusting Bolt ( 2 )
3/8 -16X48 HEX SOC L CS ST SS B
0017-00101-1880

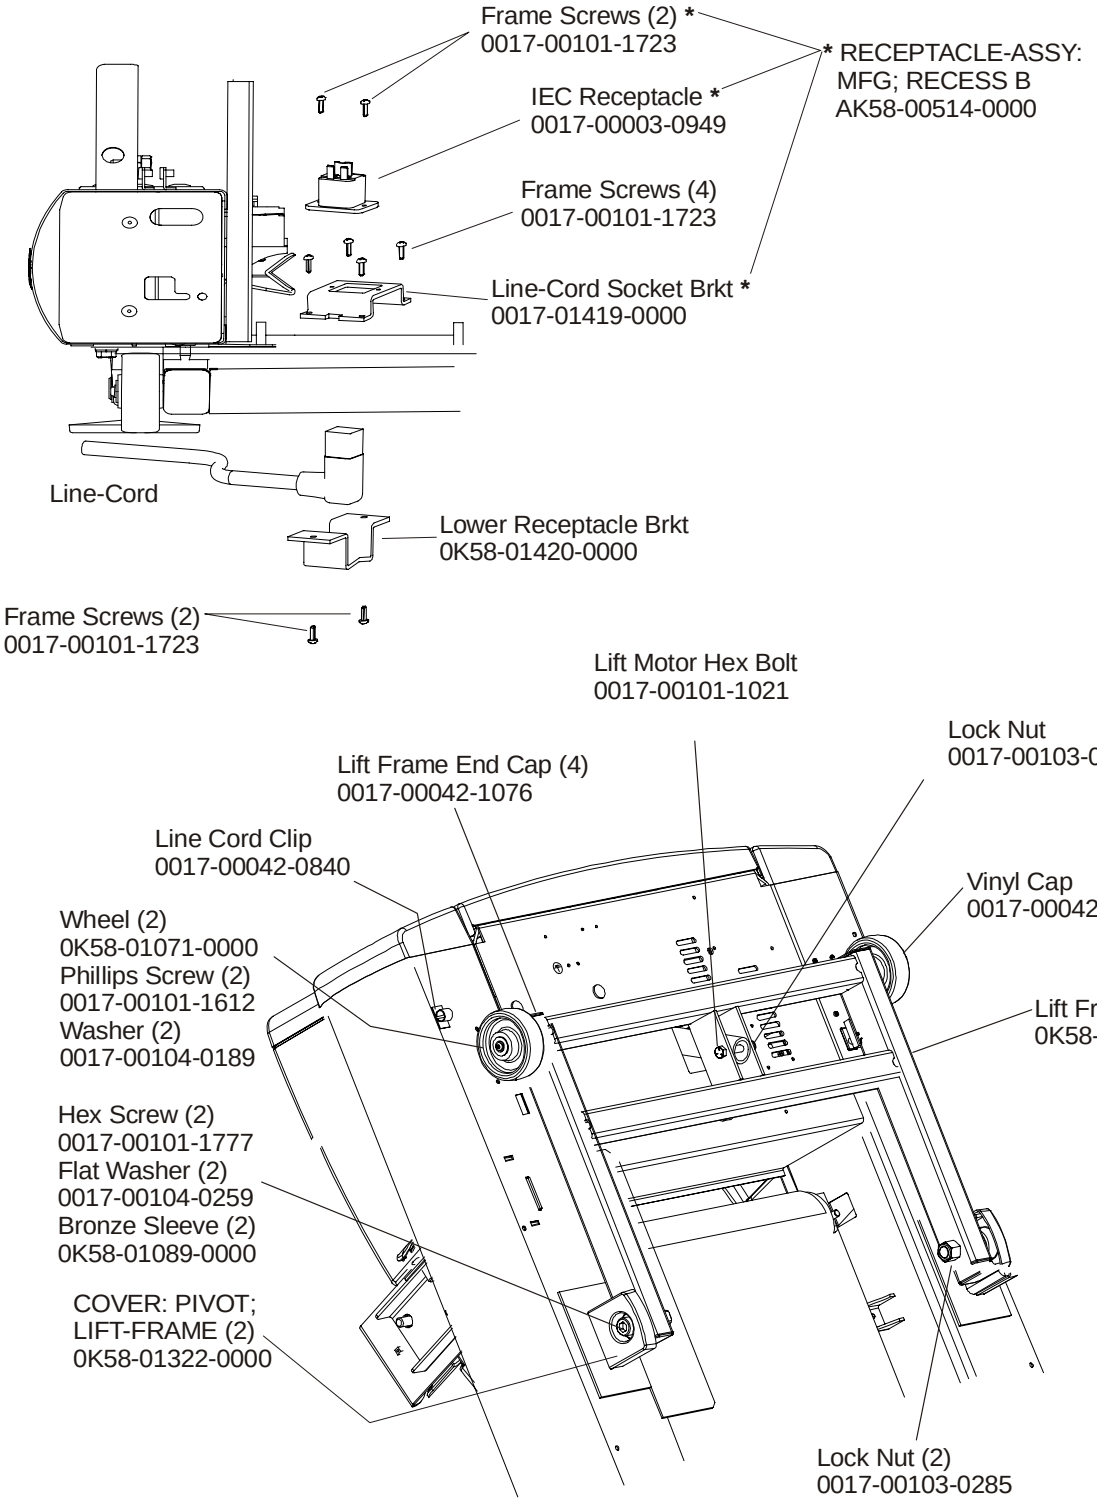
Frame Screws (2) *
0017-00101-1723
* RECEPTACLE-ASSY:
MFG; RECESS B
AK58-00514-0000
IEC Receptacle *
0017-00003-0949
Frame Screws (4)
0017-00101-1723
Line-Cord Socket Brkt *
0017-01419-0000
Line-Cord
Lower Receptacle Brkt
0K58-01420-0000
Frame Screws (2)
0017-00101-1723
Lift Motor Hex Bolt
0017-00101-1021
Lock Nut
0017-00103-0025
Lift Frame End Cap (4)
0017-00042-1076
Line Cord Clip
0017-00042-0840
Vinyl Cap
0017-00042-1075
Wheel (2)
0K58-01071-0000
Phillips Screw (2)
0017-00101-1612
Washer (2)
0017-00104-0189
Lift Frame
0K58-01066-0000
Hex Screw (2)
0017-00101-1777
Flat Washer (2)
0017-00104-0259
Bronze Sleeve (2)
0K58-01089-0000
COVER: PIVOT;
LIFT-FRAME (2)
0K58-01322-0000
Lock Nut (2)
0017-00103-0285

**Lift Motor Assembly - AK58-00075-0000** **S/N TDT100000 and up**

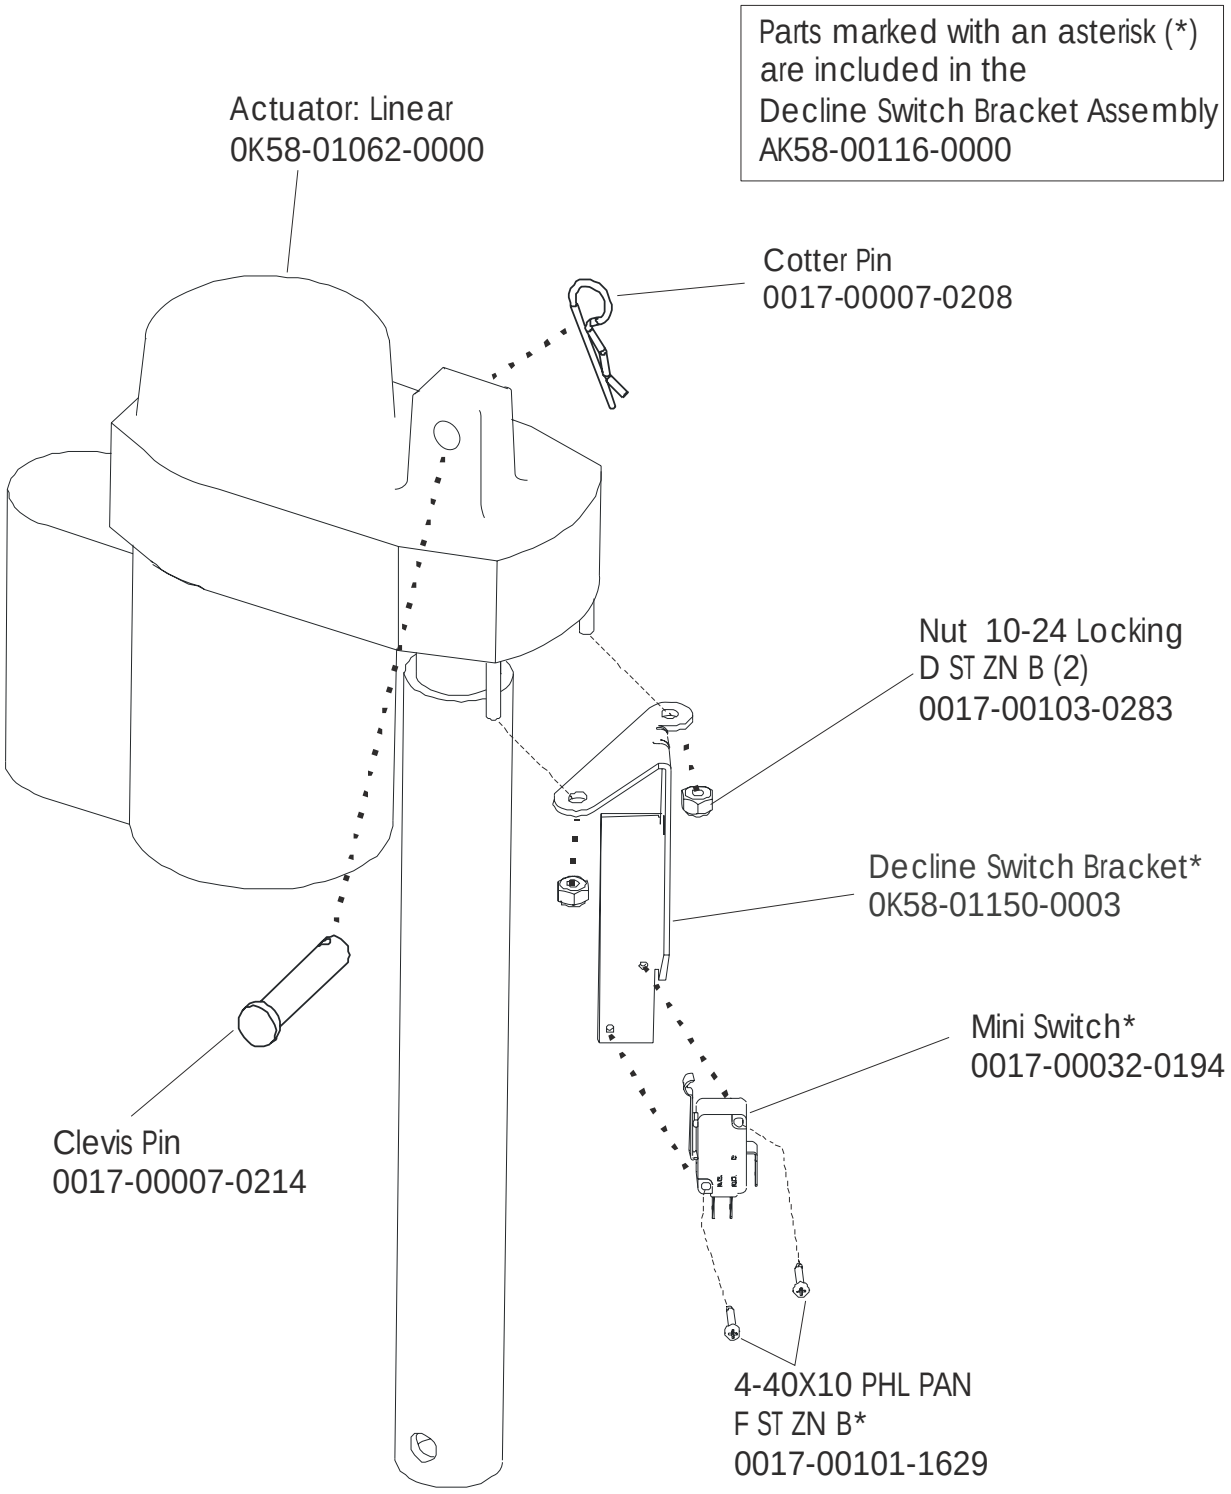

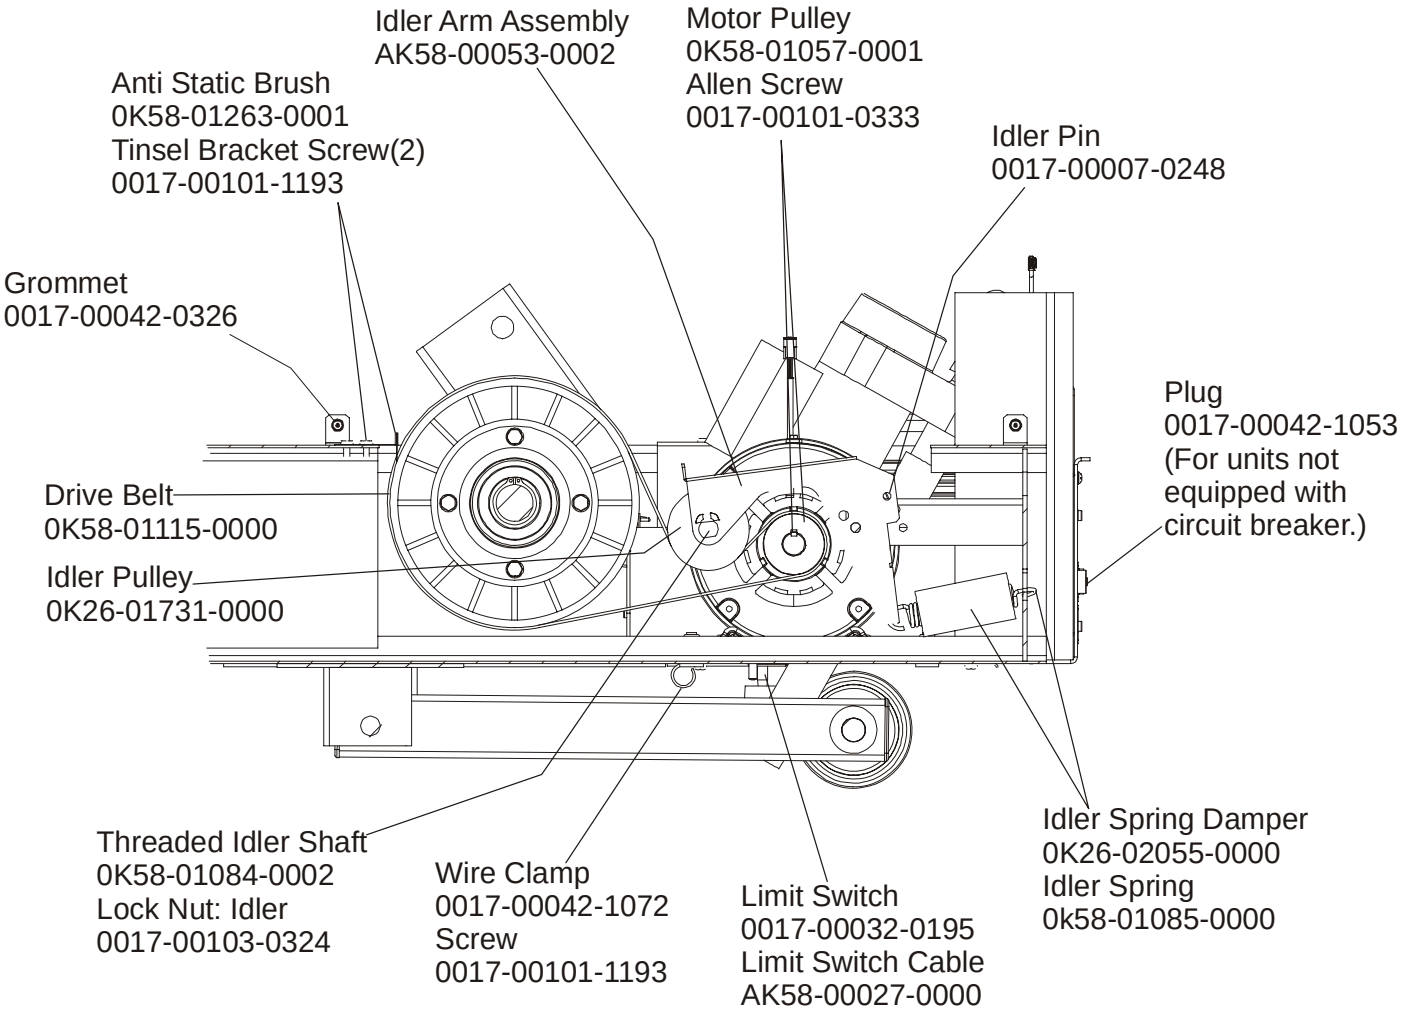
Idler Arm Assembly
AK58-00053-0002
Motor Pulley
0K58-01057-0001
Allen Screw
0017-00101-0333
Anti Static Brush
0K58-01263-0001
Tinsel Bracket Screw(2)
0017-00101-1193
Idler Pin
0017-00007-0248
Grommet
0017-00042-0326
Plug
0017-00042-1053
(For units not
equipped with
circuit breaker.)
Drive Belt
0K58-01115-0000
Idler Pulley
0K26-01731-0000
Threaded Idler Shaft
0K58-01084-0002
Lock Nut: Idler
0017-00103-0324
Wire Clamp
0017-00042-1072
Screw
0017-00101-1193
Limit Switch
0017-00032-0195
Limit Switch Cable
AK58-00027-0000
Idler Spring Damper
0K26-02055-0000
Idler Spring
0k58-01085-0000

**Leg Leveler Assembly – AK58-00464-0000** **S/N TDT100000 and up**

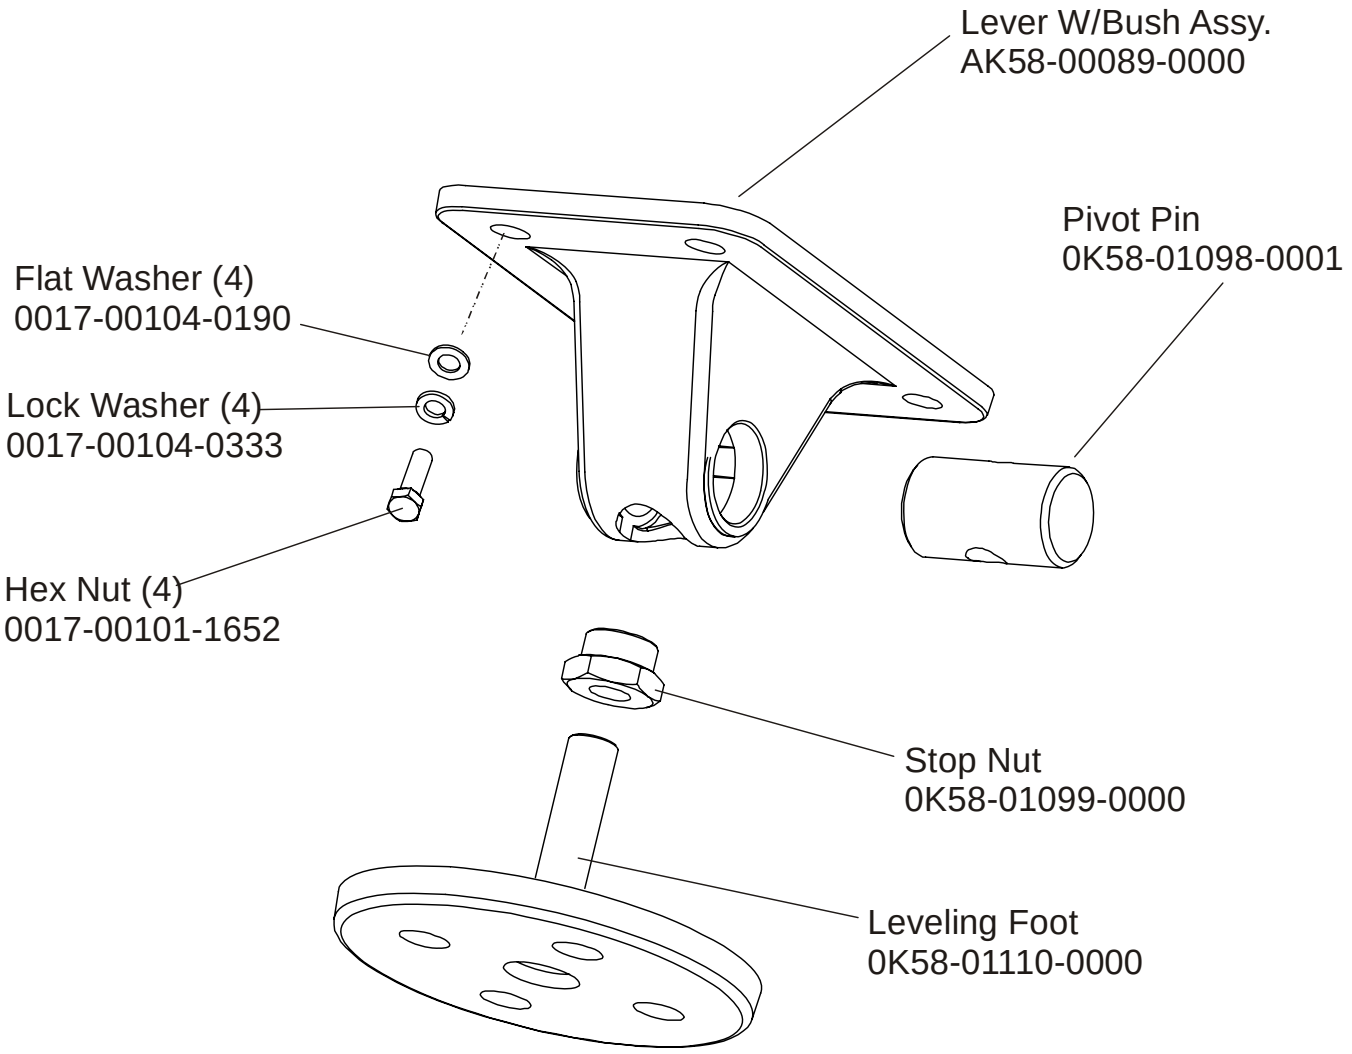

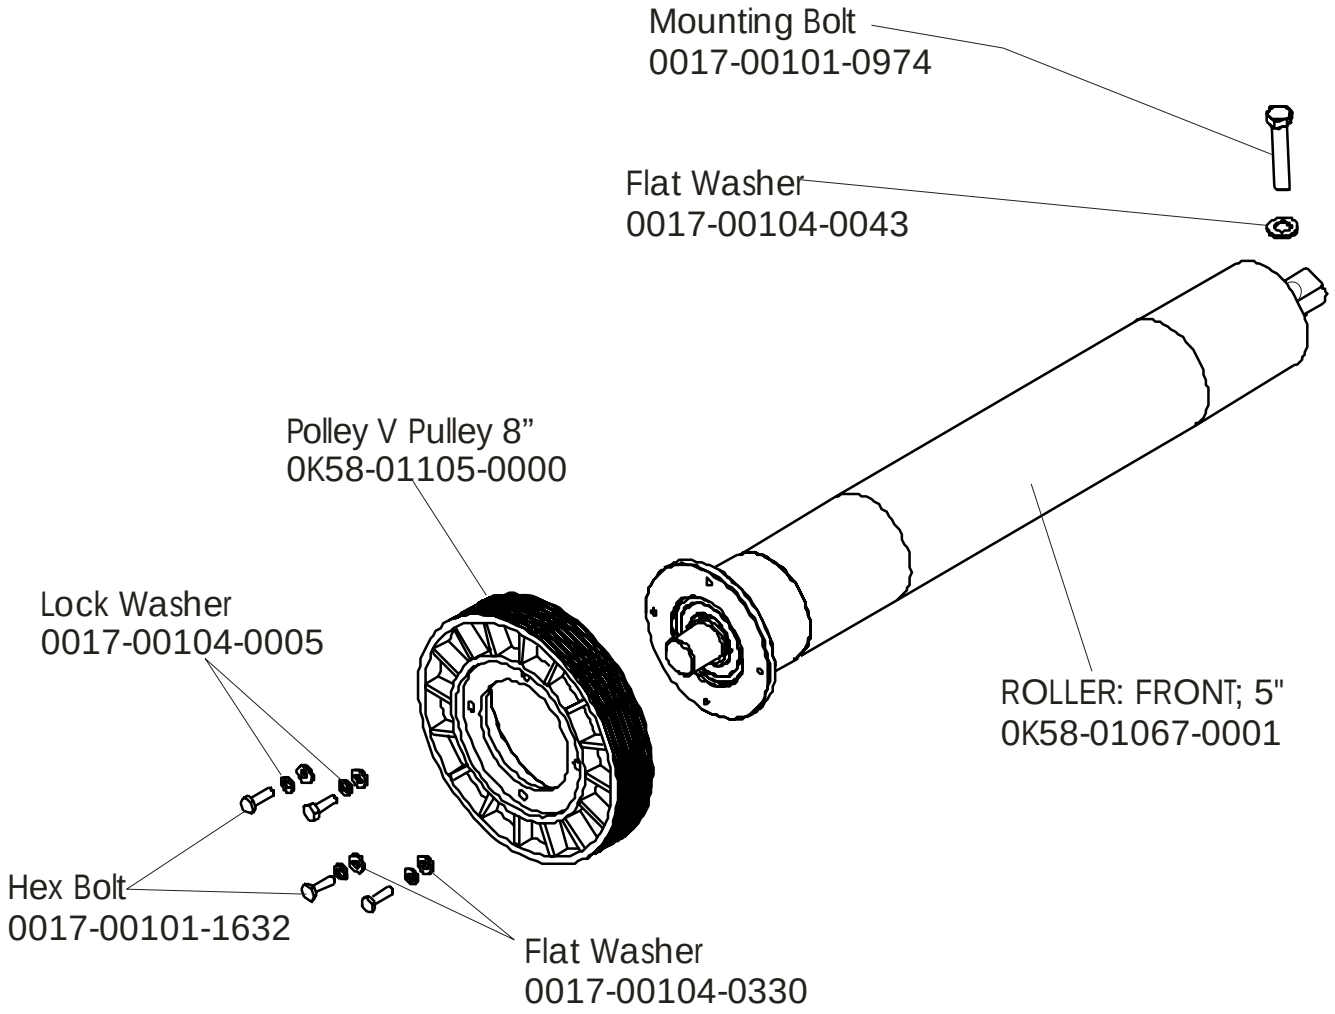
Mounting Bolt
0017-00101-0974
Flat Washer
0017-00104-0043
Polley V Pulley 8”
0K58-01105-0000
Lock Washer
0017-00104-0005
ROLLER: FRONT; 5"
0K58-01067-0001
Hex Bolt
0017-00101-1632
Flat Washer
0017-00104-0330

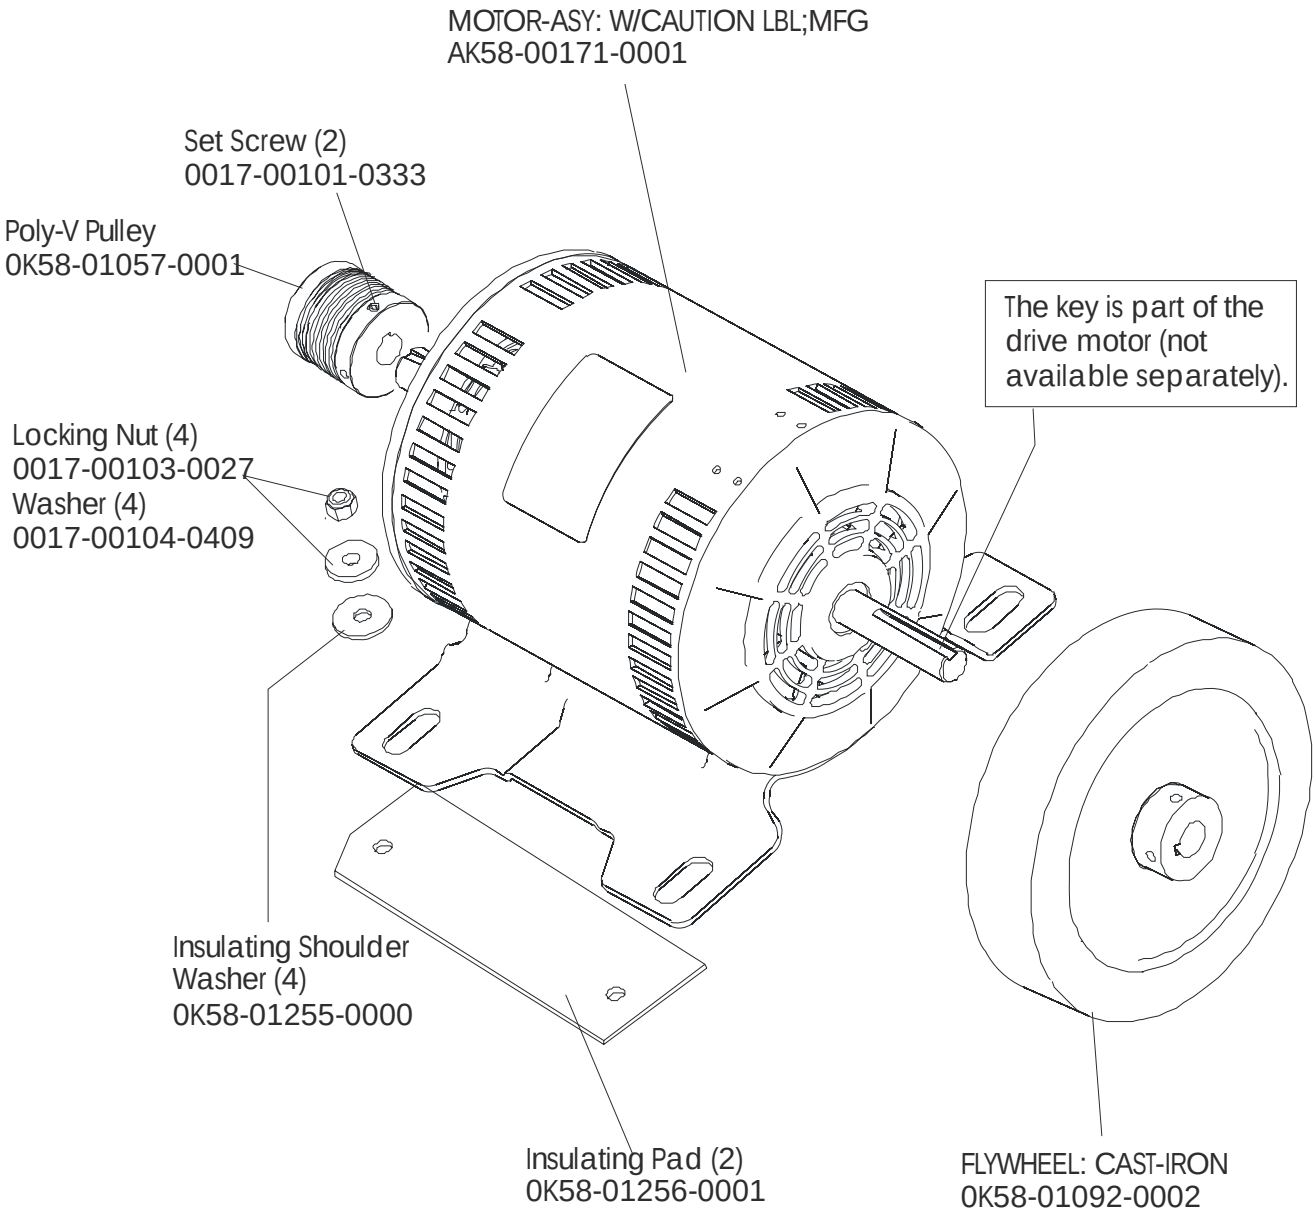
MOTOR-ASY: W/CAUTION LBL;MFG
AK58-00171-0001
Set Screw (2)
0017-00101-0333
Poly-V Pulley
0K58-01057-0001
The key is part of the drive motor (not available separately).
Locking Nut (4)
0017-00103-0027
Washer (4)
0017-00104-0409
Insulating Shoulder Washer (4)
0K58-01255-0000
Insulating Pad (2)
0K58-01256-0001
FLYWHEEL: CAST-IRON
0K58-01092-0002

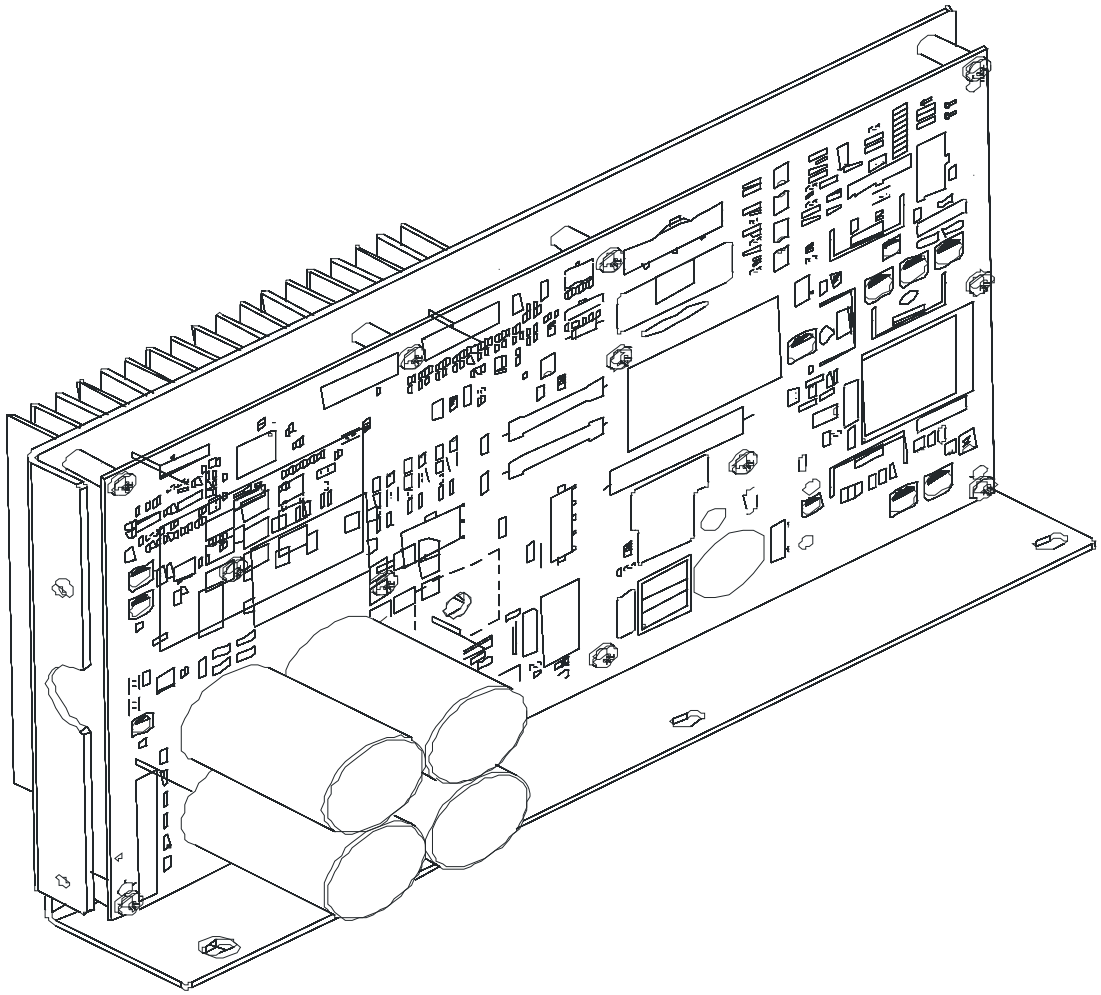

| VOLTAGE | PART NUMBER | PART DESCRIPTION |
|---|---|---|
| 100-120 | GK58-00002-0118 | KIT: SERV; MFG; DSP CONTROLLER 100-120; LED |
| 200-240 | GK58-00002-0120 | KIT: SERV; MFG; DSP CONTROLLER 200-240; LED |

| MODEL # | MODEL DESCRIPTION | STANDARD LINE CORDS |
|---|---|---|
| 95TWEZ-0100-02 | 95TWEZ ENG/ENG 120/60 DOM | 0017-00003-0974<br>LINE-CORD: R/A; 96"; W/RECP S/C-C |
| 95TWEZ-0300-02 | 95TWEZ FRN/MET 120/60 DOM | |
| 95TWEZ-0400-02 | 95TWEZ SPN/MET 120/60 DOM | |
| 95TWEZ-0800-02 | 95TWEZ POR/MET 120/60 DOM | |
| 95TWEZ-0103-02 | 95TWEZ ENG+MET 220/60 DOM | 0017-00003-0781<br>LINE-CORD: R/A; 220V; USA D |
| 95TWEZ-0105-02 | 95TWEZ ENG+MET 100/50 DOM | |
| 95TWEZ-0106-02 | 95TWEZ ENG+MET 200/50 DOM | |
| 95TWEZ-0705-02 | 95TWEZ JAP/MET 100/50 DOM | |
| 95TWEZ-0706-02 | 95TWEZ JAP/MET 200/50 DOM | |
| 95TWEZ-0101-02 | 95TWEZ ENG+MET 230/50 CON | 0017-00003-0696<br>LINE-CORD: R/A; CEE7; 103" 10A 250V D |
| 95TWEZ-0201-02 | 95TWEZ GER/MET 230/50 CON | |
| 95TWEZ-0301-02 | 95TWEZ FRN/MET 230/50 CON | |
| 95TWEZ-0401-02 | 95TWEZ SPN/MET 230/50 CON | |
| 95TWEZ-0501-02 | 95TWEZ ITL/MET 230/50 CON | |
| 95TWEZ-0601-02 | 95TWEZ DUT/MET 230/50 CON | |
| 95TWEZ-0801-02 | 95TWEZ POR/MET 230/50 CON | |
| 95TWEZ-1601-02 | 95TWEZ ENG/TUR 230/50 CON | |
| 95TWEZ-0102-02 | 95TWEZ ENG+MET 240/50 UK | 0017-00003-0890<br>LINE-CORD: U.K; R/A |
| 95TWEZ-0109-02 | 95TWEZ ENG+MET 230/50 UK | |
| 95TWEZ-0104-02 | 95TWEZ ENG+MET 240V+ AUS | 0017-00003-0996<br>LINE-CORD: IEC; AUSTRALIAN; 230/50 C |

| OPTIONAL LINE CORDS | | |
|---|---|---|
| 0017-00003-0947 | LINE-CORD: 120V; 20A; | 12' |
| 0017-00003-0915 | LINE-CORD: R/A 120V | 8' |
| 0017-00003-0980 | LINE-CORD: R/A; NEMA 5-20 144" | 12' |
| 0017-00003-0981 | LINE-CORD: R/A; W/PLUG 220/60 | 7.5' |
| 0017-00003-0948 | LINE-CORD: 220V; 15A; | 12' |

**CABLES FOR UNITS BETWEEN 0100 - 0104** **S/N TDT100000 and up**

| PART NUMBER | PART DESCRIPTION | 97T-XXXX-05 | | | | |
|---|---|---|---|---|---|---|
| | | **0100** 120/60 **DOM** | **0101** 230/50 **CON** | **0102** 240/50 **UK** | **0103** 220/60 **DOM** | **0104** 240V+ **CON** |
| 0017-00003-0626 | CIRCUIT-BREAKER: 2A S/C#18-D | | X | X | X | X |
| 0017-00003-0898 | FILTER: LINE; 10-AMP 4-SHT C | | X | X | | |
| 0017-00003-0950 | CIRCUIT-BREAKER: 4A S/C#18-D | | | | | |
| 0017-00003-1015 | FILTER: LINE; 20A 3-SHTS C | X | | | X | X |
| AK32-00020-0002 | CBL-ASSY: COAX; 120" S/C-B | X | X | X | X | X |
| AK32-00078-0001 | CBL-ASSY: PWR EXT; 120" S/C-C | X | X | X | X | X |
| AK58-00027-0000 | CBL-ASSY: ZERO-SWITCH C | X | X | X | X | X |
| AK58-00031-0000 | CBL-ASSY: SIDE-CONSOLE C | X | X | X | X | X |
| AK58-00032-0000 | CBL-ASSY: USER SENSE PROX. C | X | X | X | X | X |
| AK58-00034-0001 | CBL-ASSY: CONSOLE; PWR; UPR C | X | X | X | X | X |
| AK58-00036-0000 | CBL-ASSY: EMERGENCY-STOP C | X | X | X | X | X |
| AK58-00041-0001 | CBL-ASSY: H/R SENSORS C | X | X | X | X | X |
| AK58-00081-0000 | CBL-ASSY: JUMPER; BLK; 4" B | X | X | X | X | X |
| AK58-00082-0000 | CBL-ASSY: JUMPER; WHT; 6" B | X | X | X | X | X |
| AK58-00083-0000 | CBL-ASSY: JUMPER; GR/YL; 5" B | X | X | X | X | X |
| AK58-00210-0000 | XFRMR-BRKT ASSY: MFG. C | | X | X | X | X |
| AK58-00224-0001 | CBL-ASSY: MOV; FILTER C | X | X | X | X | X |
| AK58-00237-0000 | CBL-ASSY: POLAR/E-STOP C | X | X | X | X | X |
| AK58-00263-0000 | CBL-ASSY: HI-POT JUMPER B | X | X | X | X | X |
| AK58-00520-0000 | CBL-ASSY: POWER; 100-200V C | X | | | | |
| AK58-00522-0000 | CBL-ASSY: JUMPER; POWER; LED-CONS B | X | X | X | X | X |
| AK58-00596-0001 | CBL-ASSY: POWER; 230-240V; LED; S/C-C | | X | X | X | X |
| AK60-00009-0001 | CBL-ASSY: ZERO-NEGATIVE SW; 15" S/C-C | X | X | X | X | X |

| PART NUMBER | PART DESCRIPTION | 97T-XXXX-05 | | | | |
|---|---|---|---|---|---|---|
| | | **0105** 100/50 **DOM** | **0106** 200/50 **DOM** | **0109** 230/50 **CON** | **0201** 230/50 **CON** | **0300** 120/60 **DOM** |
| 0017-00003-0626 | CIRCUIT-BREAKER: 2A S/C#18-D | | X | X | X | |
| 0017-00003-0898 | FILTER: LINE; 10-AMP 4-SHT C | | | X | X | |
| 0017-00003-0950 | CIRCUIT-BREAKER: 4A S/C#18-D | X | | | | |
| 0017-00003-1015 | FILTER: LINE; 20A 3-SHTS C | X | X | | | X |
| AK32-00020-0002 | CBL-ASSY: COAX; 120" S/C-B | X | X | X | X | X |
| AK32-00078-0001 | CBL-ASSY: PWR EXT; 120" S/C-C | X | X | X | X | X |
| AK58-00027-0000 | CBL-ASSY: ZERO-SWITCH C | X | X | X | X | X |
| AK58-00031-0000 | CBL-ASSY: SIDE-CONSOLE C | X | X | X | X | X |
| AK58-00032-0000 | CBL-ASSY: USER SENSE PROX. C | X | X | X | X | X |
| AK58-00034-0001 | CBL-ASSY: CONSOLE; PWR; UPR C | X | X | X | X | X |
| AK58-00036-0000 | CBL-ASSY: EMERGENCY-STOP C | X | X | X | X | X |
| AK58-00041-0001 | CBL-ASSY: H/R SENSORS C | X | X | X | X | X |
| AK58-00081-0000 | CBL-ASSY: JUMPER; BLK; 4" B | X | X | X | X | X |
| AK58-00082-0000 | CBL-ASSY: JUMPER; WHT; 6" B | X | X | X | X | X |
| AK58-00083-0000 | CBL-ASSY: JUMPER; GR/YL; 5" B | X | X | X | X | X |
| AK58-00210-0000 | XFRMR-BRKT ASSY: MFG. C | | X | X | X | |
| AK58-00224-0001 | CBL-ASSY: MOV; FILTER C | X | X | X | X | X |
| AK58-00237-0000 | CBL-ASSY: POLAR/E-STOP C | X | X | X | X | X |
| AK58-00263-0000 | CBL-ASSY: HI-POT JUMPER B | X | X | X | X | X |
| AK58-00520-0000 | CBL-ASSY: POWER; 100-200V C | X | | | | X |
| AK58-00522-0000 | CBL-ASSY: JUMPER; POWER; LED-CONS B | X | X | X | X | X |
| AK58-00596-0001 | CBL-ASSY: POWER; 230-240V; LED; S/C-C | | X | X | X | |
| AK60-00009-0001 | CBL-ASSY: ZERO-NEGATIVE SW; 15" S/C-C | X | X | X | X | X |

| PART NUMBER | PART DESCRIPTION | 97T-XXXX-05 | | | | |
|---|---|---|---|---|---|---|
| | | **0301** 230/50 **CON** | **0400** 120/60 **DOM** | **0401** 230/50 **CON** | **0501** 230/50 CON | **0601** 230/50 **CON** |
| 0017-00003-0626 | CIRCUIT-BREAKER: 2A S/C#18-D | **X** | | **X** | **X** | **X** |
| 0017-00003-0898 | FILTER: LINE; 10-AMP 4-SHT C | **X** | | **X** | **X** | **X** |
| 0017-00003-0950 | CIRCUIT-BREAKER: 4A S/C#18-D | | | | | |
| 0017-00003-1015 | FILTER: LINE; 20A 3-SHTS C | | **X** | | | |
| AK32-00020-0002 | CBL-ASSY: COAX; 120" S/C-B | **X** | **X** | **X** | **X** | **X** |
| AK32-00078-0001 | CBL-ASSY: PWR EXT; 120" S/C-C | **X** | **X** | **X** | **X** | **X** |
| AK58-00027-0000 | CBL-ASSY: ZERO-SWITCH C | **X** | **X** | **X** | **X** | **X** |
| AK58-00031-0000 | CBL-ASSY: SIDE-CONSOLE C | **X** | **X** | **X** | **X** | **X** |
| AK58-00032-0000 | CBL-ASSY: USER SENSE PROX. C | **X** | **X** | **X** | **X** | **X** |
| AK58-00034-0001 | CBL-ASSY: CONSOLE; PWR; UPR C | **X** | **X** | **X** | **X** | **X** |
| AK58-00036-0000 | CBL-ASSY: EMERGENCY-STOP C | **X** | **X** | **X** | **X** | **X** |
| AK58-00041-0001 | CBL-ASSY: H/R SENSORS C | **X** | **X** | **X** | **X** | **X** |
| AK58-00081-0000 | CBL-ASSY: JUMPER; BLK; 4" B | **X** | **X** | **X** | **X** | **X** |
| AK58-00082-0000 | CBL-ASSY: JUMPER; WHT; 6" B | **X** | **X** | **X** | **X** | **X** |
| AK58-00083-0000 | CBL-ASSY: JUMPER; GR/YL; 5" B | **X** | **X** | **X** | **X** | **X** |
| AK58-00210-0000 | XFRMR-BRKT ASSY: MFG. C | **X** | | **X** | **X** | **X** |
| AK58-00224-0001 | CBL-ASSY: MOV; FILTER C | **X** | **X** | **X** | **X** | **X** |
| AK58-00237-0000 | CBL-ASSY: POLAR/E-STOP C | **X** | **X** | **X** | **X** | **X** |
| AK58-00263-0000 | CBL-ASSY: HI-POT JUMPER B | **X** | **X** | **X** | **X** | **X** |
| AK58-00520-0000 | CBL-ASSY: POWER; 100-200V C | | **X** | | | |
| AK58-00522-0000 | CBL-ASSY: JUMPER; POWER; LED-CONS B | **X** | **X** | **X** | **X** | **X** |
| AK58-00596-0001 | CBL-ASSY: POWER; 230-240V; LED; S/C-C | **X** | | **X** | **X** | **X** |
| AK60-00009-0001 | CBL-ASSY: ZERO-NEGATIVE SW; 15" S/C-C | **X** | **X** | **X** | **X** | **X** |

**CABLES FOR UNITS BETWEEN 0705 - 1601** **S/N TDT100000 and up**

| PART NUMBER | PART DESCRIPTION | 97T-XXXX-05 | | | | |
|---|---|---|---|---|---|---|
| | | **0705** 100/50 **DOM** | **0706** 200/50 **DOM** | **0800** 120/50 **DOM** | **0801** 230/50 **CON** | **1601** 230/50 **CON** |
| 0017-00003-0626 | CIRCUIT-BREAKER: 2A S/C#18-D | | X | | X | X |
| 0017-00003-0898 | FILTER: LINE; 10-AMP 4-SHT C | | | | X | X |
| 0017-00003-0950 | CIRCUIT-BREAKER: 4A S/C#18-D | | | | | |
| 0017-00003-1015 | FILTER: LINE; 20A 3-SHTS C | X | X | X | | |
| AK32-00020-0002 | CBL-ASSY: COAX; 120" S/C-B | X | X | X | X | X |
| AK32-00078-0001 | CBL-ASSY: PWR EXT; 120" S/C-C | X | X | X | X | X |
| AK58-00027-0000 | CBL-ASSY: ZERO-SWITCH C | X | X | X | X | X |
| AK58-00031-0000 | CBL-ASSY: SIDE-CONSOLE C | X | X | X | X | X |
| AK58-00032-0000 | CBL-ASSY: USER SENSE PROX. C | X | X | X | X | X |
| AK58-00034-0001 | CBL-ASSY: CONSOLE; PWR; UPR C | X | X | X | X | X |
| AK58-00036-0000 | CBL-ASSY: EMERGENCY-STOP C | X | X | X | X | X |
| AK58-00041-0001 | CBL-ASSY: H/R SENSORS C | X | X | X | X | X |
| AK58-00081-0000 | CBL-ASSY: JUMPER; BLK; 4" B | X | X | X | X | X |
| AK58-00082-0000 | CBL-ASSY: JUMPER; WHT; 6" B | X | X | X | X | X |
| AK58-00083-0000 | CBL-ASSY: JUMPER; GR/YL; 5" B | X | X | X | X | X |
| AK58-00210-0000 | XFRMR-BRKT ASSY: MFG. C | | X | | X | X |
| AK58-00224-0001 | CBL-ASSY: MOV; FILTER C | X | X | X | X | X |
| AK58-00237-0000 | CBL-ASSY: POLAR/E-STOP C | X | X | X | X | X |
| AK58-00263-0000 | CBL-ASSY: HI-POT JUMPER B | X | X | X | X | X |
| AK58-00520-0000 | CBL-ASSY: POWER; 100-200V C | X | | X | | |
| AK58-00522-0000 | CBL-ASSY: JUMPER; POWER; LED-CONS B | X | X | X | X | X |
| AK58-00524-0000 | CBL-ASSY: THERMAL ADAPTER B | X | X | X | X | X |
| AK58-00596-0001 | CBL-ASSY: POWER; 230-240V; LED; S/C-C | | X | | X | X |
| AK60-00009-0001 | CBL-ASSY: ZERO-NEGATIVE SW; 15" S/C-C | X | X | X | X | X |